

## 91-117 Removal and installation of door contact vacuum switch (Coupe)

---

### Color code of vacuum lines for backrest lock

---

|              |            |
|--------------|------------|
| Control line | light blue |
| Throttle     | dark blue  |

---

### Note


---

Starting February 1975, the control lines for backrest lock have been changed from 5 mm to 4 mm OD.

### Removal

---

- 1 Pull door contact vacuum switch (44) from hinge column.
- 2 Pull off connection (17) with control line.
- 3 Pull coupling (45) from door contact vacuum switch (44).

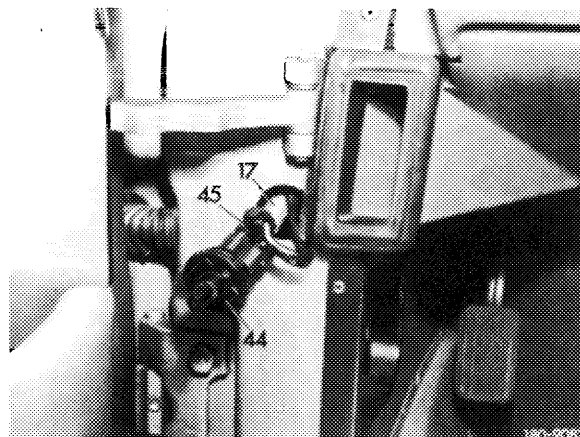

### Installation

---

- 4 Plug coupling (45) on door contact vacuum switch (44).
- 5 Slip-on connection (17) with control line.
- 6 Push door contact vacuum switch (44) into hinge column.

