

A. General


On models 107 and 126 with 8-cylinder engine a new control unit with coding plug will be installed starting approx. 12.86. The 6-cylinder models will be phased in.

After using up spare parts stocks, only the new control unit and the respective coding plug will be available.

The new control unit with coding plug has no influence on cable lines and thereby also on wiring diagrams. Installation can proceed without changing harness.



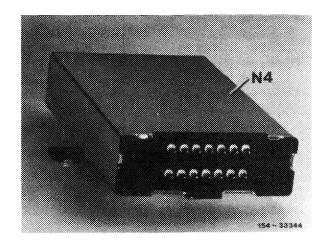

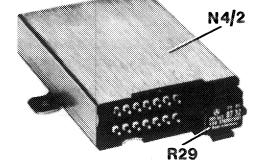


N4/2 Control unit, cruise control/Tempomat R 29 Coding plug, cruise control/Tempomat


B. Models 107, 123, 126 lefthand steering with automatic transmission

Removal

- 1 Remove cover under instrument panel on driver's side.
- 2 Pull plug from control unit (2).
- 3 Unscrew control unit (2) with holder on pedal bearing bracket.
- 4 Unscrew control unit (2) from holder.

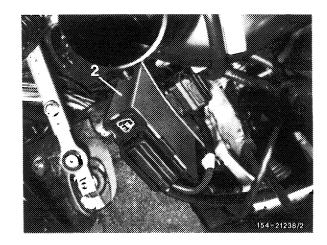

Model 107

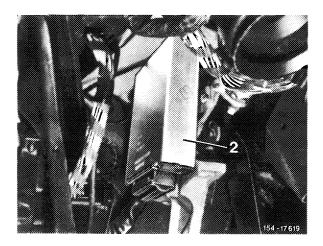

Models 123, 126


Installation

- 5 For installation proceed vice-versa.
- 6 Check adjustment of connecting rod (21) and readjust, if required (54–561).
- 7 Perform function test on road.


C. Models 107, 126, righthand steering with automatic transmission

Removal

- 1 Remove cover under instrument panel on driver's side.
- 2 Pull plug coupling from control unit (2).
- 3 Unscrew control unit (2) with holder from pedal bearing bracket.
- 4 Unscrew control unit (2) from holder.

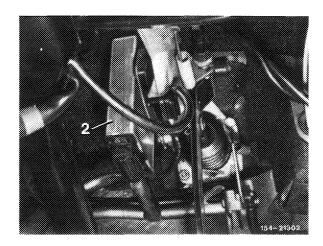

Model 107

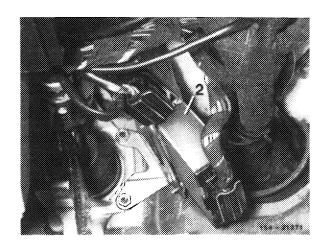

Model 126


Installation

- 5 For installation proceed vice versa.
- 6 Check adjustment of connecting rod (21) and readjust, if required (54–561).
- 7 Perform function test on road.

D. Model 123, lefthand steering with manual transmission

Removal

- 1 Remove cover under instrument panel on driver's side.
- 2 Pull plug coupling from control unit (arrow).
- 3 Unscrew control unit (arrow) from holder of cover.

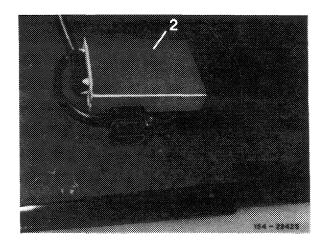

Installation

- 5 For installation proceed vice versa.
- 6 Check adjustment of connecting rod (21) and readjust, if required (54–561).
- 7 Perform function test on road.

E. Model 123 righthand steering

Removal

- 1 Remove cover under instrument panel on driver's side.
- 2 Remove cover on righthand front wall pillar.
- 3 Pull plug coupling from control unit (2).
- 4 Unscrew control unit (2).

Installation

- 5 For installation proceed vice versa.
- 6 Check adjustment of connecting rod (21) and readjust, if required (54–561).
- 7 Perform function test on road.

