


Note

Plastic clips from opened packs must be placed in water to maintain their elasticity.

A. 1st version


Removal

1 Force off trimstrip (1) on front and rear fender, as well as on driver's and on rear compartment door by means of a plastic wedge.



Installation

2 Attach trimstrip to front and rear fender, as well as to driver's and rear compartment door by means of clips.


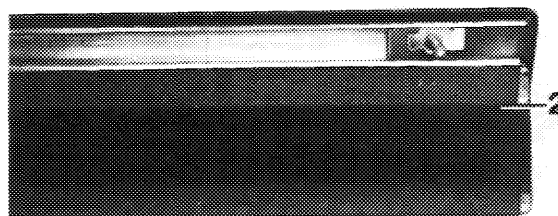


188-14722

B. 2nd version

Removal

1 Force off trimstrip (2) on front and rear fender, as well as the seal on side member by means of a plastic wedge.

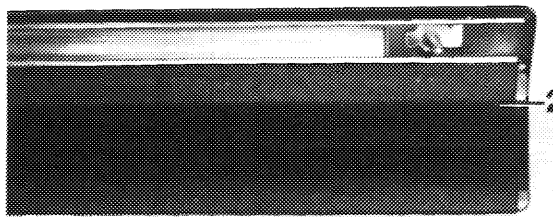


188-14722

2 Force off cap (arrow) inside on door.


- On coupe door, slightly pull sealing frame out of fastening strip in range of rear lower corner.

3 Unscrew the plastic nut behind.

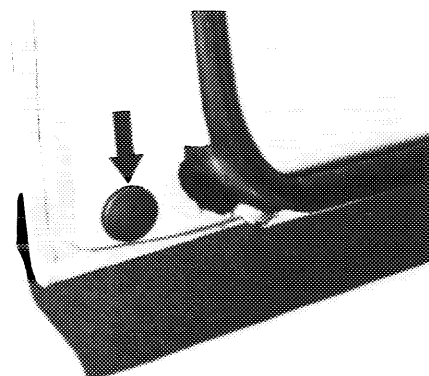

188-14721


4 Starting from the rear, remove trimstrip from clips and push forward until rear portion of fastening hook disengages from slot in door. Then pull trimstrip away from rear end of vehicle and pull out of slot in door toward the rear.

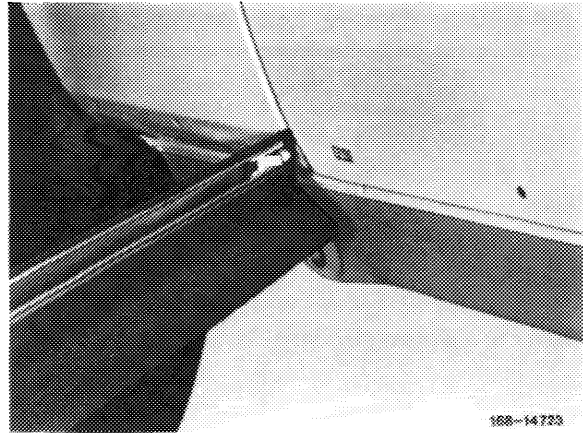


Installation

5 Attach trimstrip to front and rear fender by means of clips.

6 Attach sealing to side member by means of clips, making sure that the end piece of the seal (arrow) rests against trimstrip of rear fender.

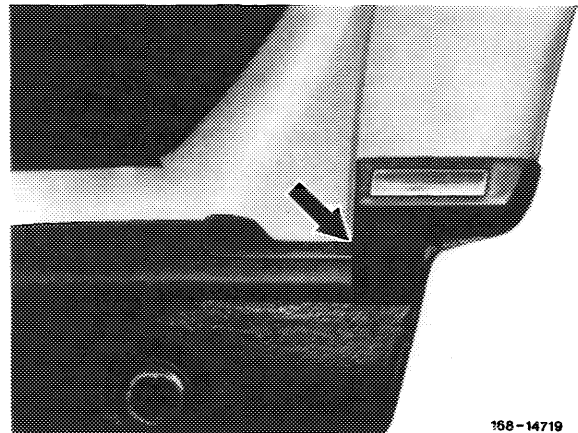

7 Attach trimstrip to door at front slot and push completely forward. Then push trimstrip in range of slot against door and pull toward the rear, so that the rear portion of the fastening hook engages in door.

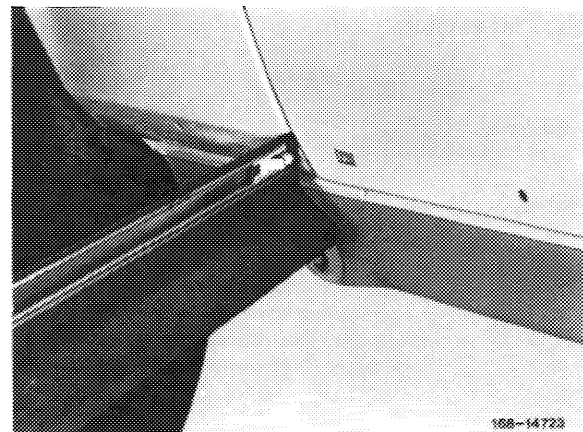

8 Attach trimstrip to door by means of clips and attach with plastic nut at rear.

9 Close assembly hole with cap.

