

# INDEX

## INDEX - Alphabetical Listing of Electrical Circuits


	SCHEMATIC	COMPONENT LOCATION		SCHEMATIC	COMPONENT LOCATION
Automatic Antenna .....	134 .....	202	Lights (continued)		
Automatic Climate Control ...	128		—License .....	113 .....	204
Auxiliary Fan .....	127 .....	201	—Marker .....	113 .....	204
Charging System .....	108 .....	202	—Park .....	112 .....	204
Cigar Lighter .....	134 .....	202	—Stop .....	117 .....	207
Clock .....	121 .....	208	—Tail .....	112 .....	204
Cruise Control .....	117 .....	207	—Trunk .....	113 .....	204
Engine Overload Protection ..	110 .....	201	—Turn Signal .....	115 .....	207
Fuse Information .....	102		Power Distribution .....	104 .....	204
Gauges .....	120 .....	208	Power Windows .....	133 .....	205
Ground Distribution .....	138		Pre-Glow System .....	106 .....	205
Heated Seats .....	135 .....	203	Radio .....	134 .....	202
Horns .....	137 .....	203	Rear Defogger (D/CD only) ..	131 .....	205
Lights			Rear Defogger (TD only) .....	132 .....	205
—Backup .....	109 .....	201	Rear Wiper/Washer .....	130 .....	206
—Center Console .....	126 .....	202	Seat Backrest Locking System	136 .....	206
—Courtesy .....	124 .....	203	Sliding Roof .....	137 .....	203
—Fog Lights .....	111 .....	203	Start/Stop (Ignition Switch) .	107 .....	206
—Glove Box .....	109 .....	201	Transmission Kickdown .....	109 .....	201
—Hazard .....	115 .....	207	Warning Indicators .....	120 .....	208
—Headlights .....	111 .....	203	Warning System .....	119 .....	208
—Instrument Cluster .....	126 .....	208	Wiper/Washer .....	129 .....	208

# WARNING INDICATORS/GAUGES/CLOCK/ INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 208)

120  
300  
D/CD/TO

300 D/CD

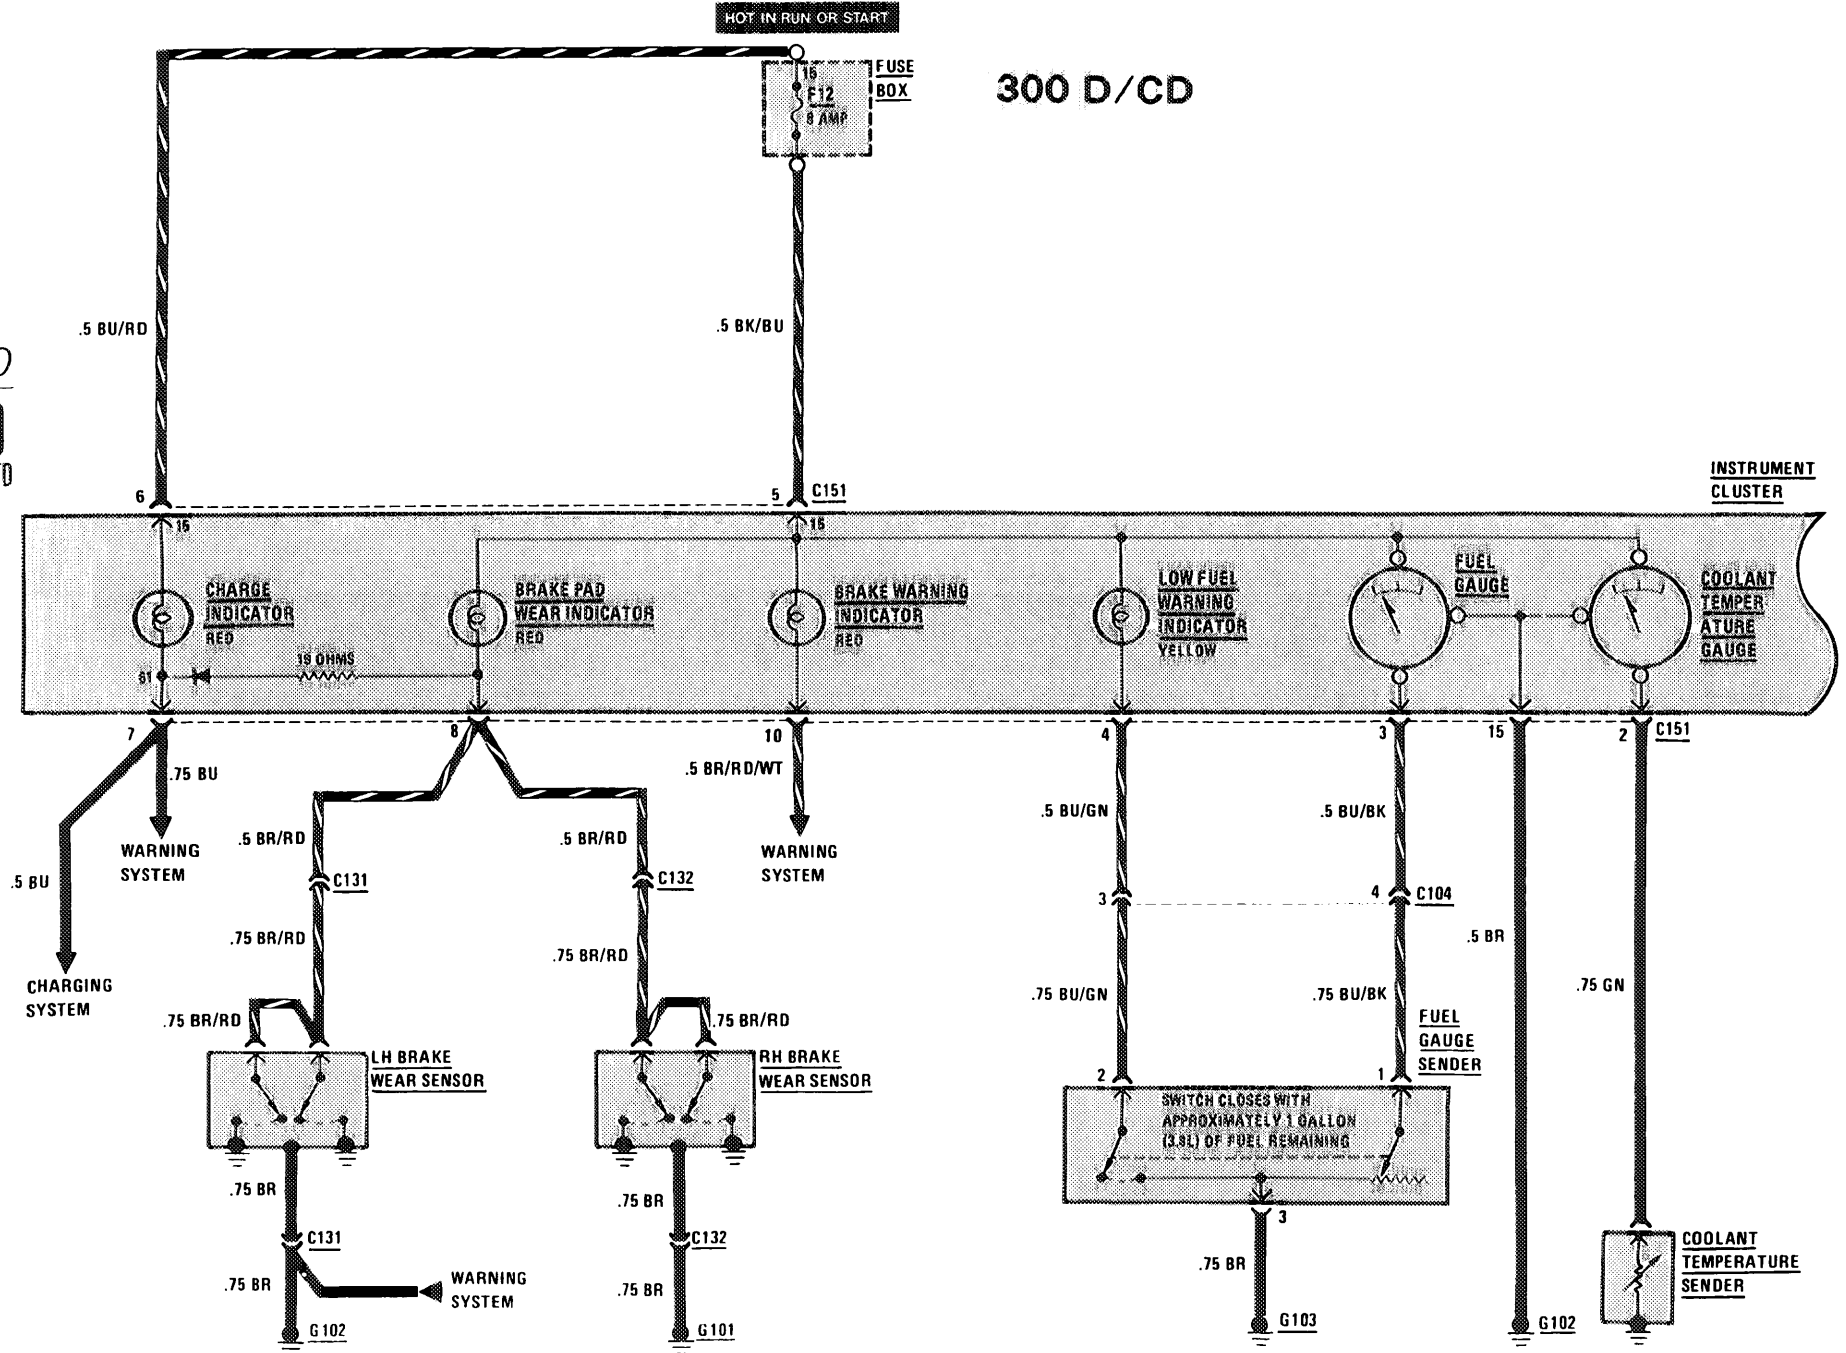


INSTRUMENT  
CLUSTER

COOLANT  
TEMPERATURE  
SENDER

# WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 208)

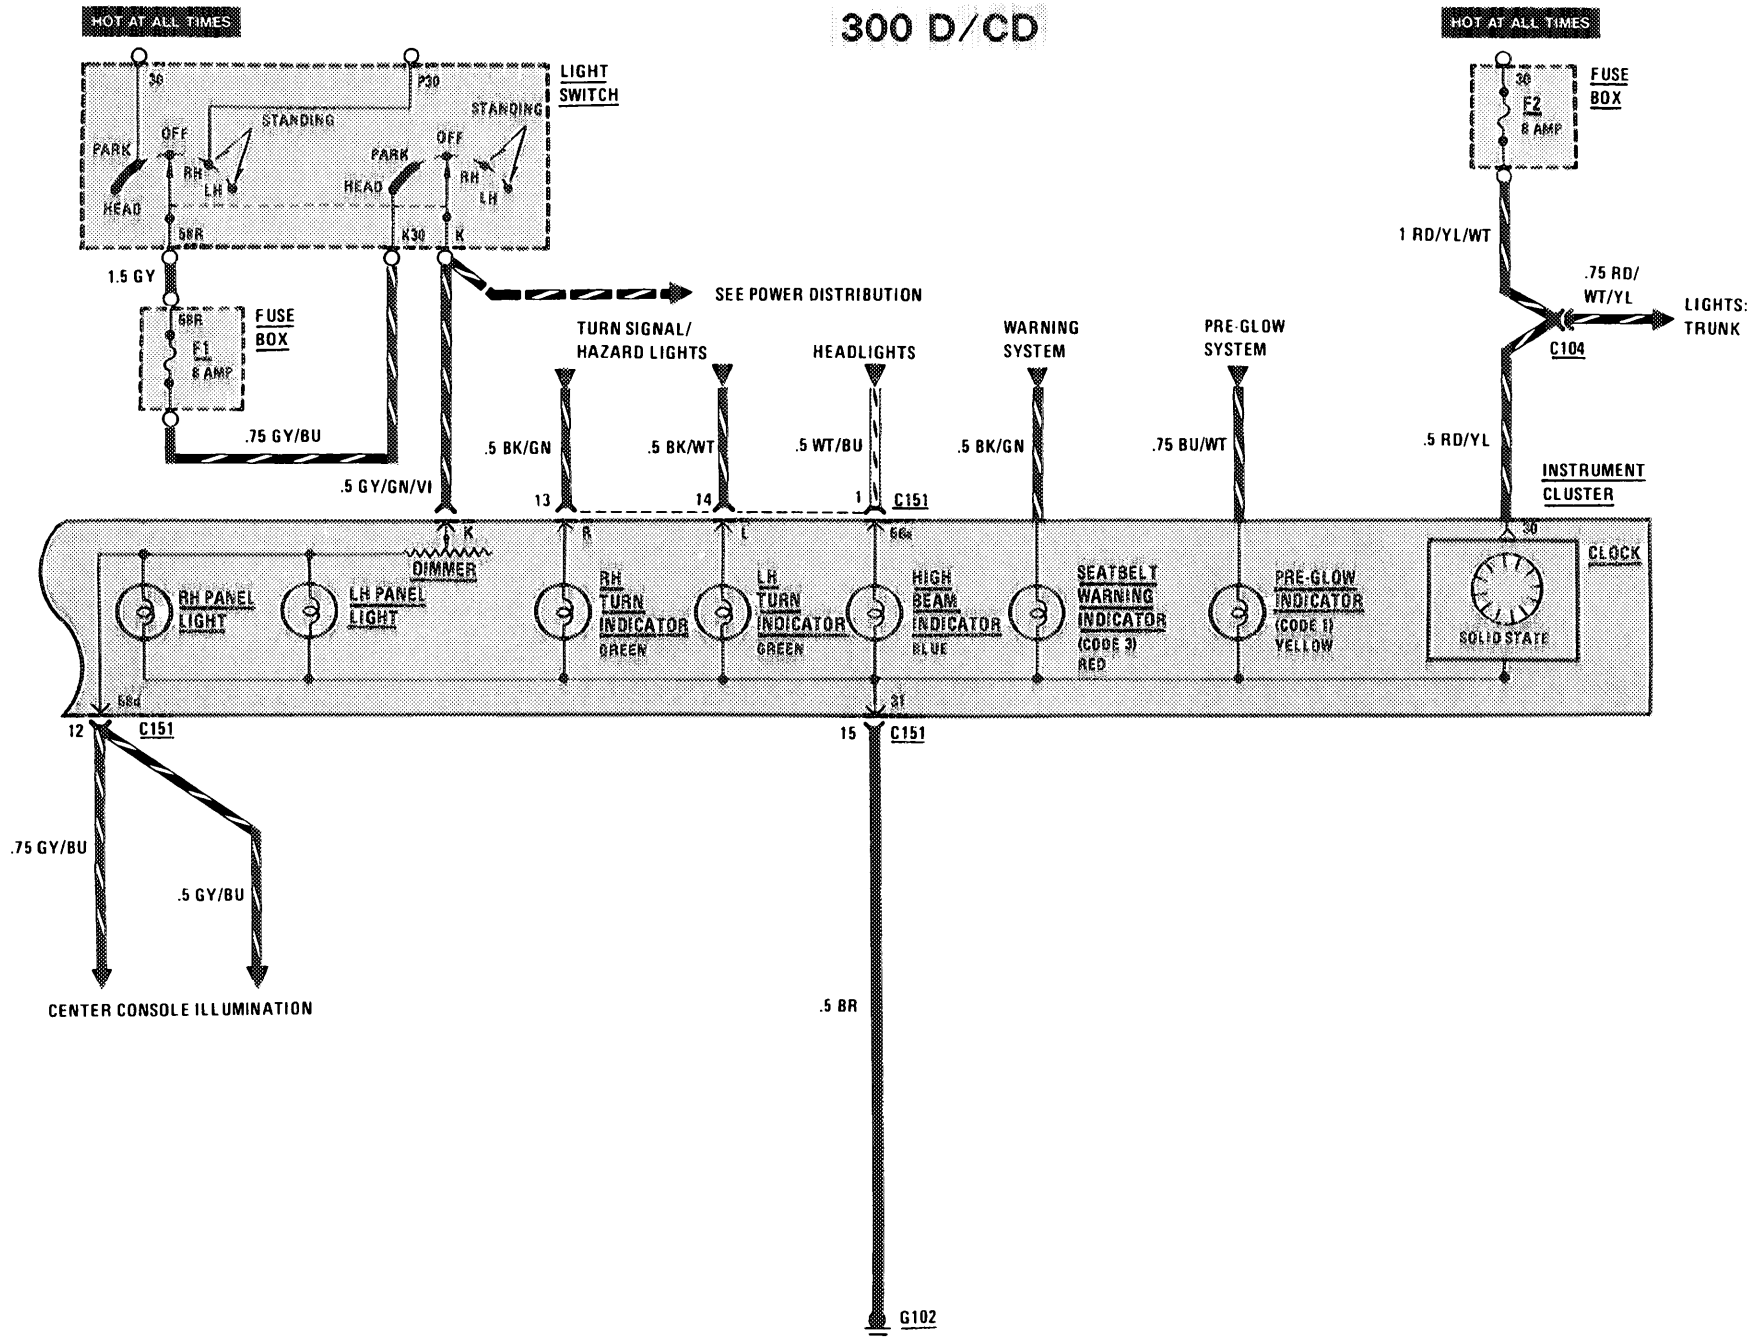


121  
300  
D/CD/TO

# WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 208)

122  
300  
O/CO/TO


300 TD

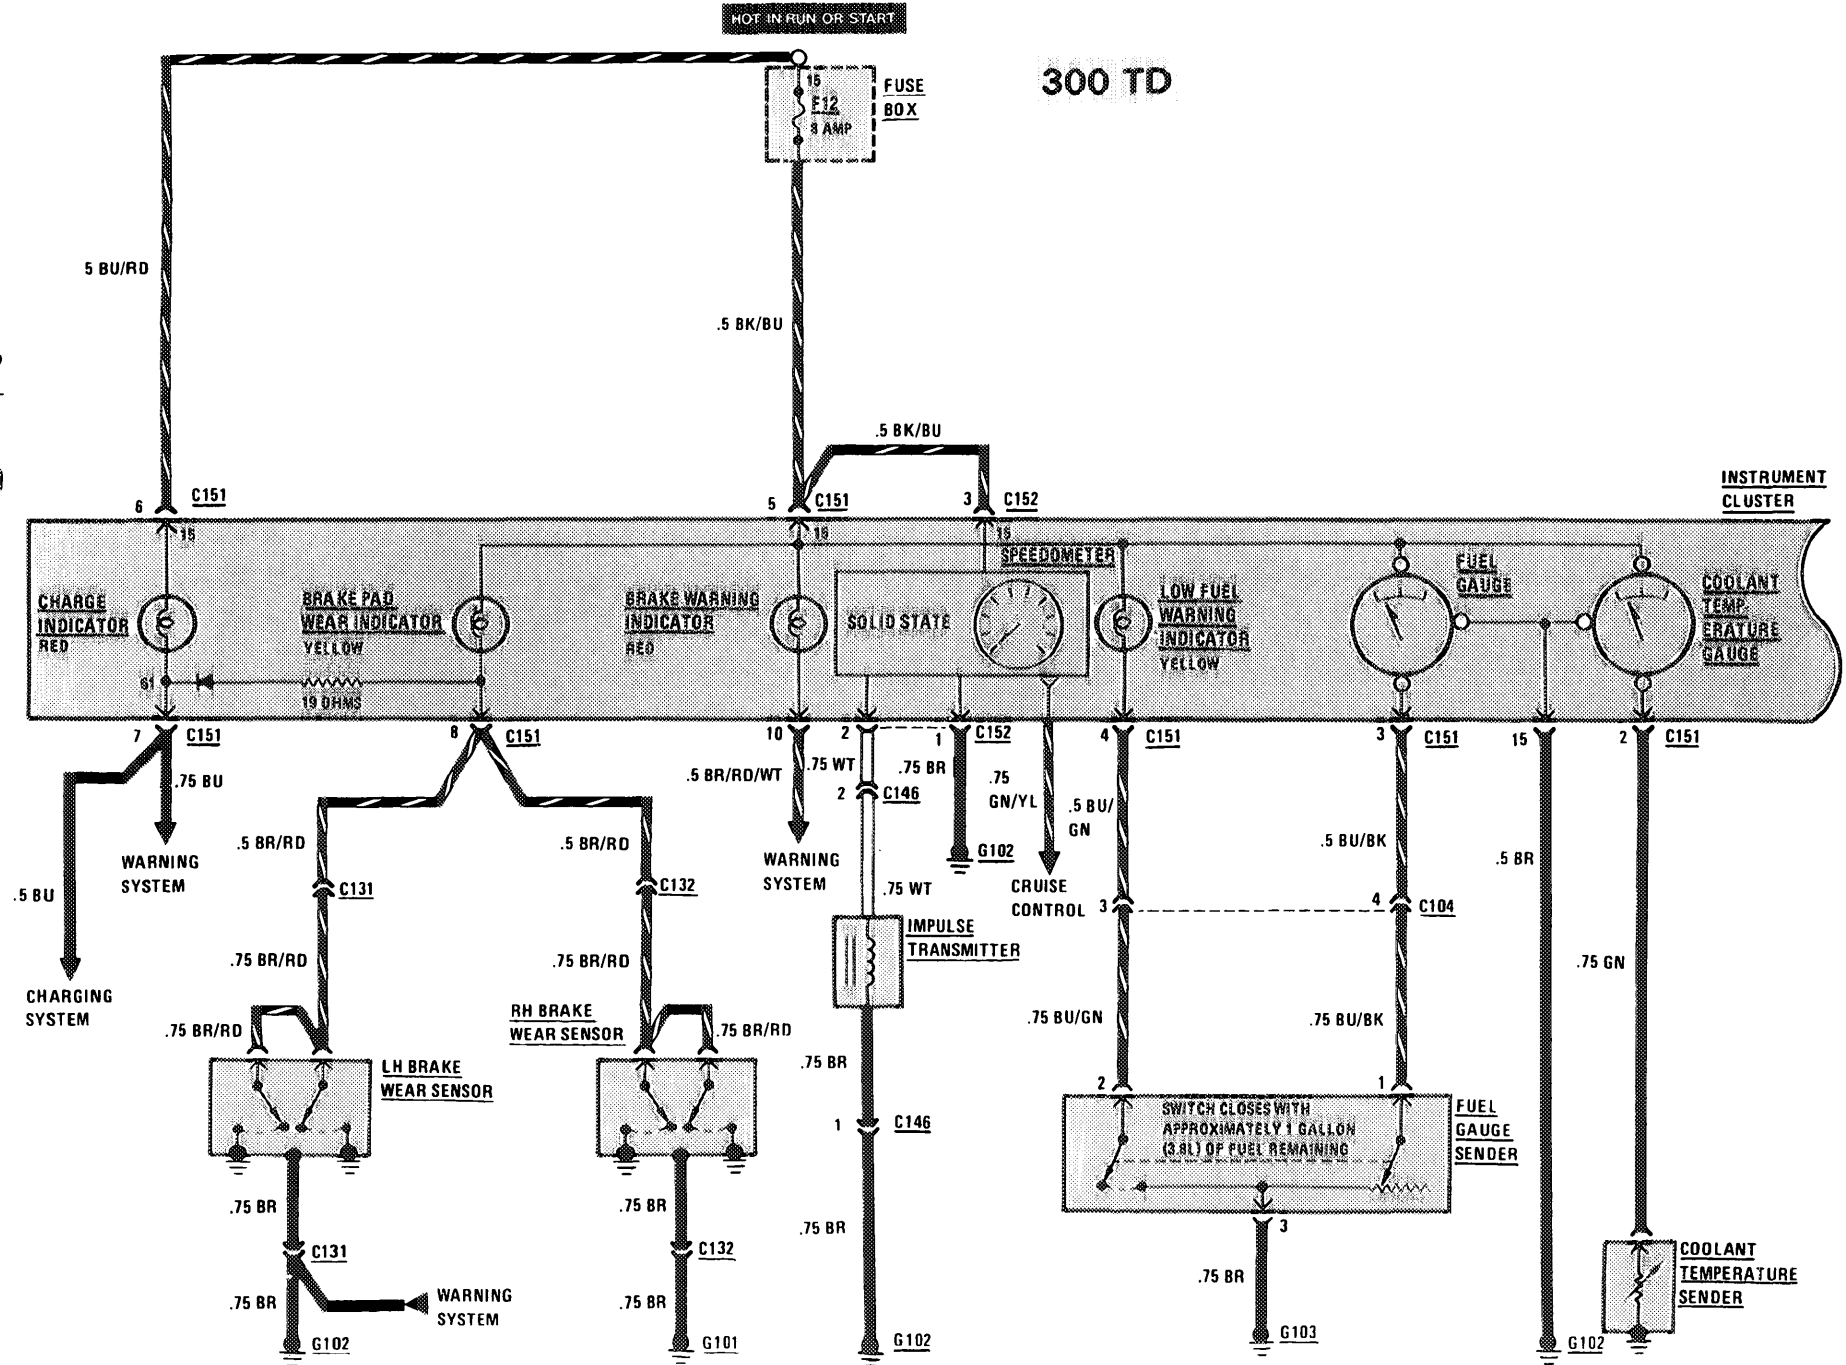

# WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

(For Component Locations See Page 208)

300 TD

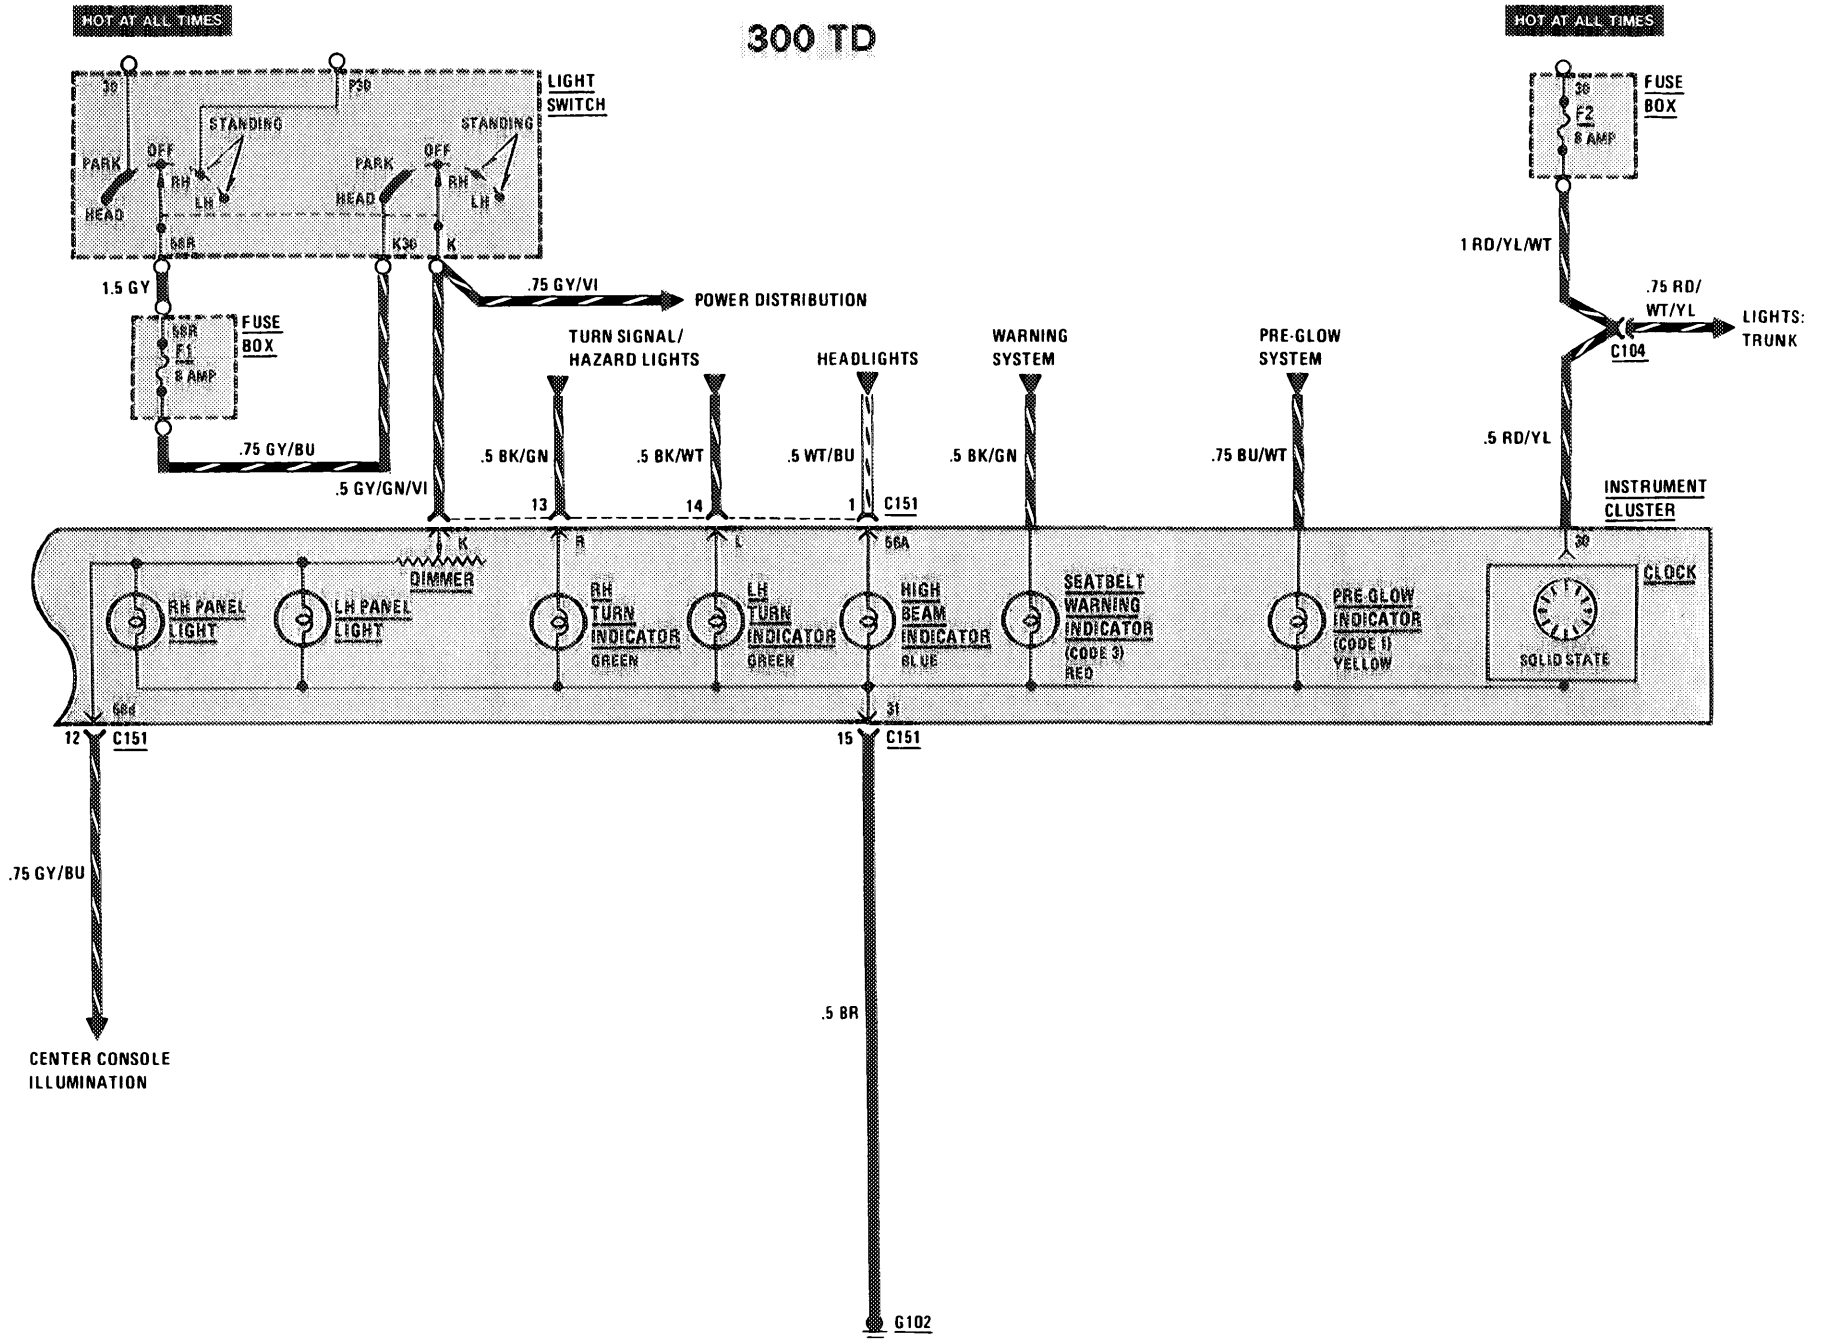


123  
300  
D/CD/TD

# COURTESY LIGHTS

(For Component Locations See Page 203)


124  
300  
D/CD/TD

300 D/CD

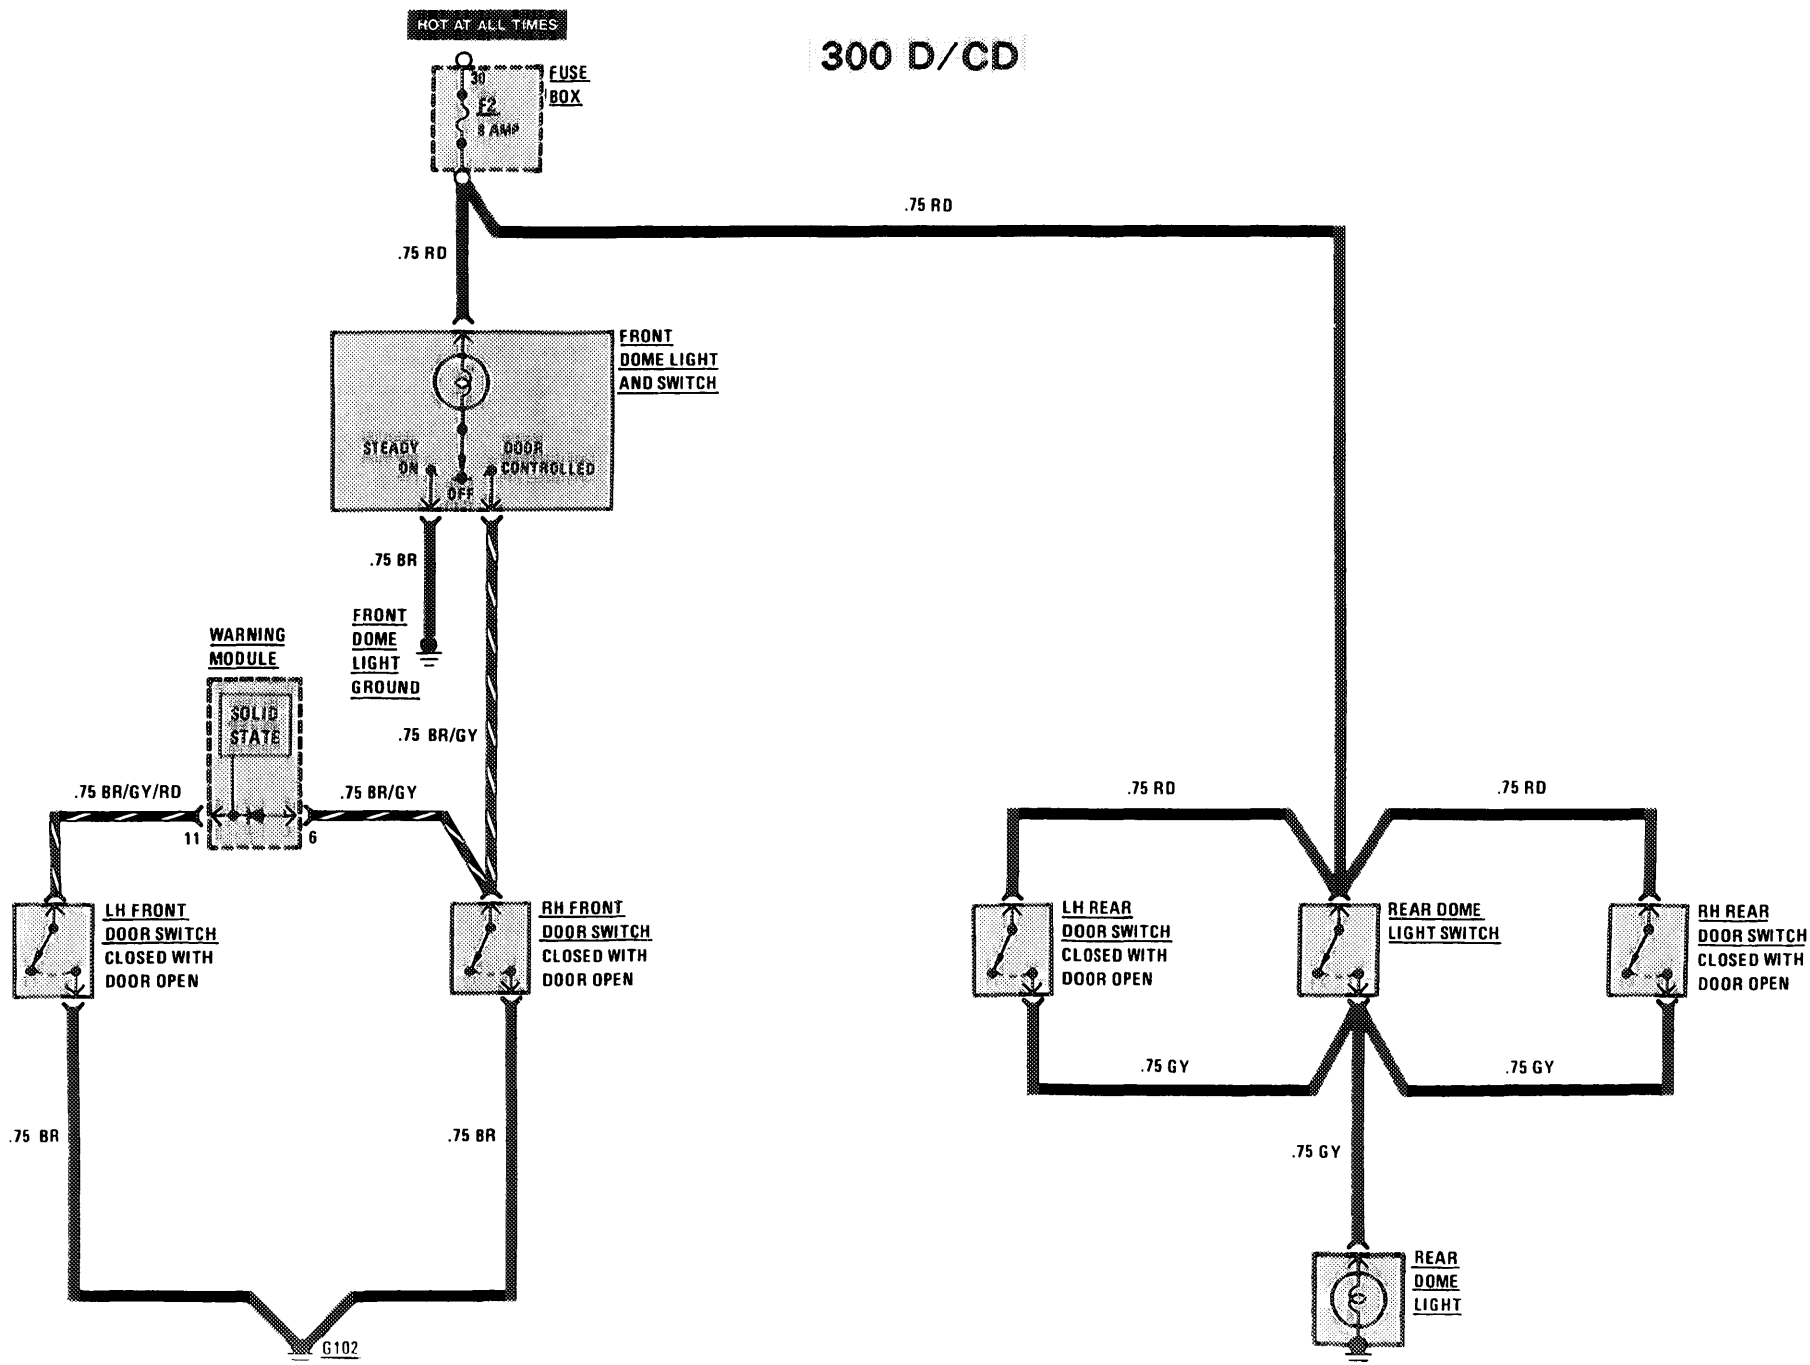

# COURTESY LIGHTS

(For Component Locations See Page 203)

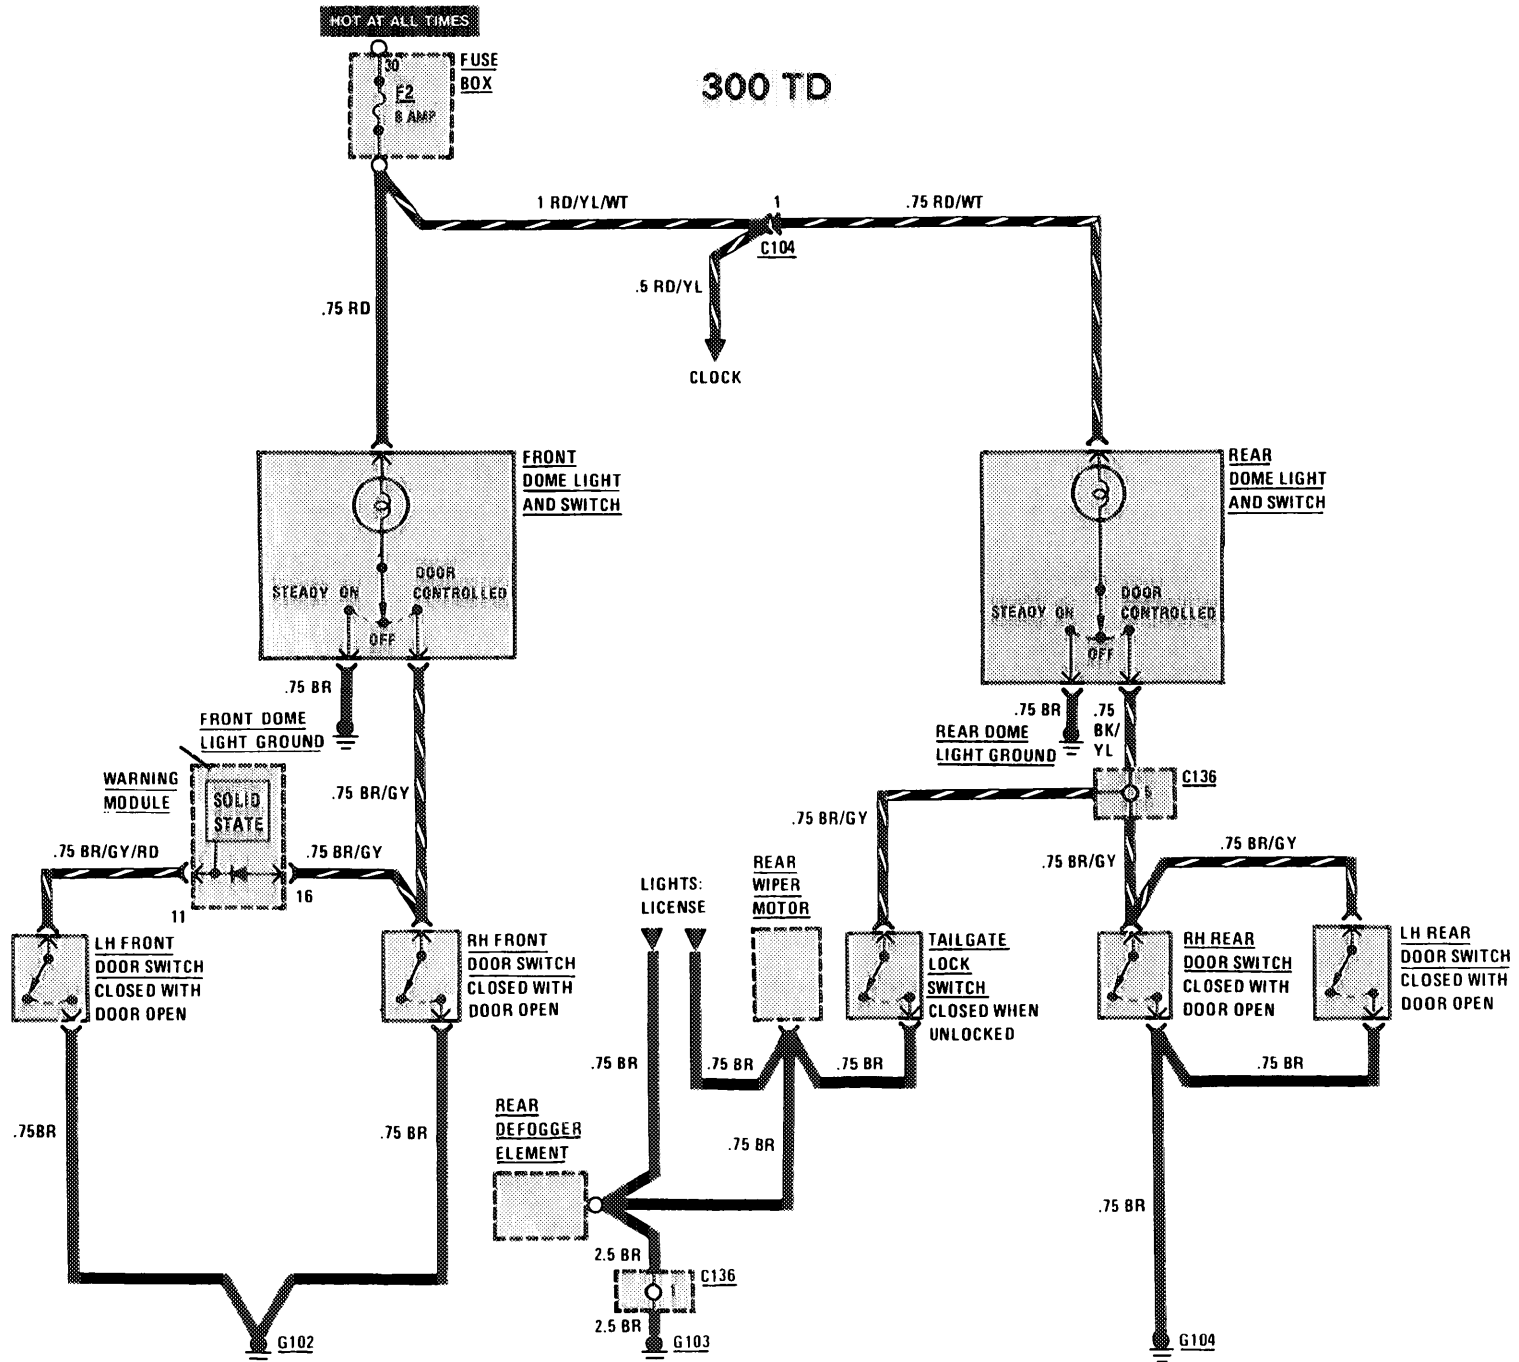


125  
**300**  
D/CD/TD

# ILLUMINATION: INSTRUMENT CLUSTER / CENTER CONSOLE

(For Component Locations See Page 202)


126  
300  
D/CO/TO

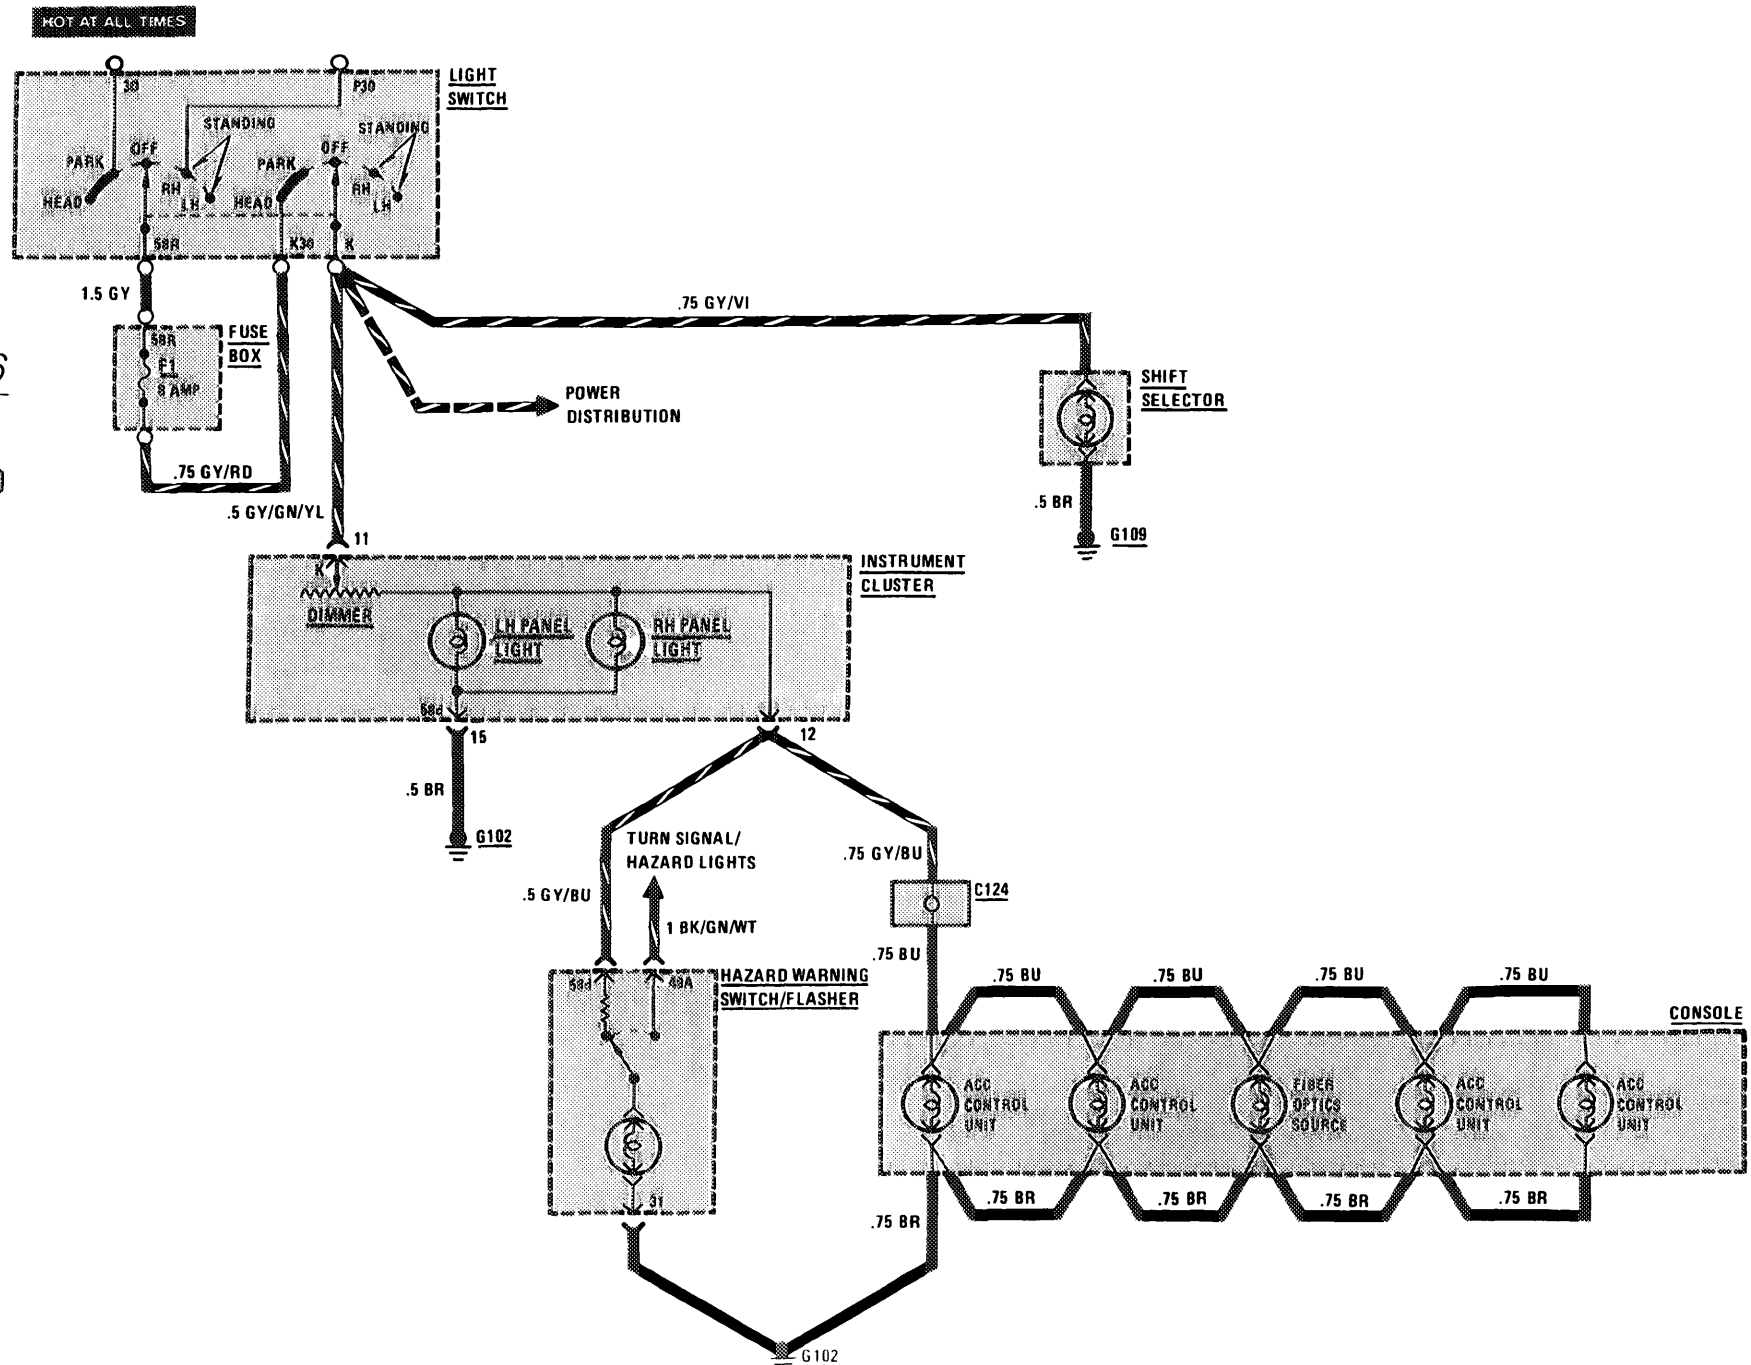



# AUXILIARY FAN

(For Component Locations See Page 201)

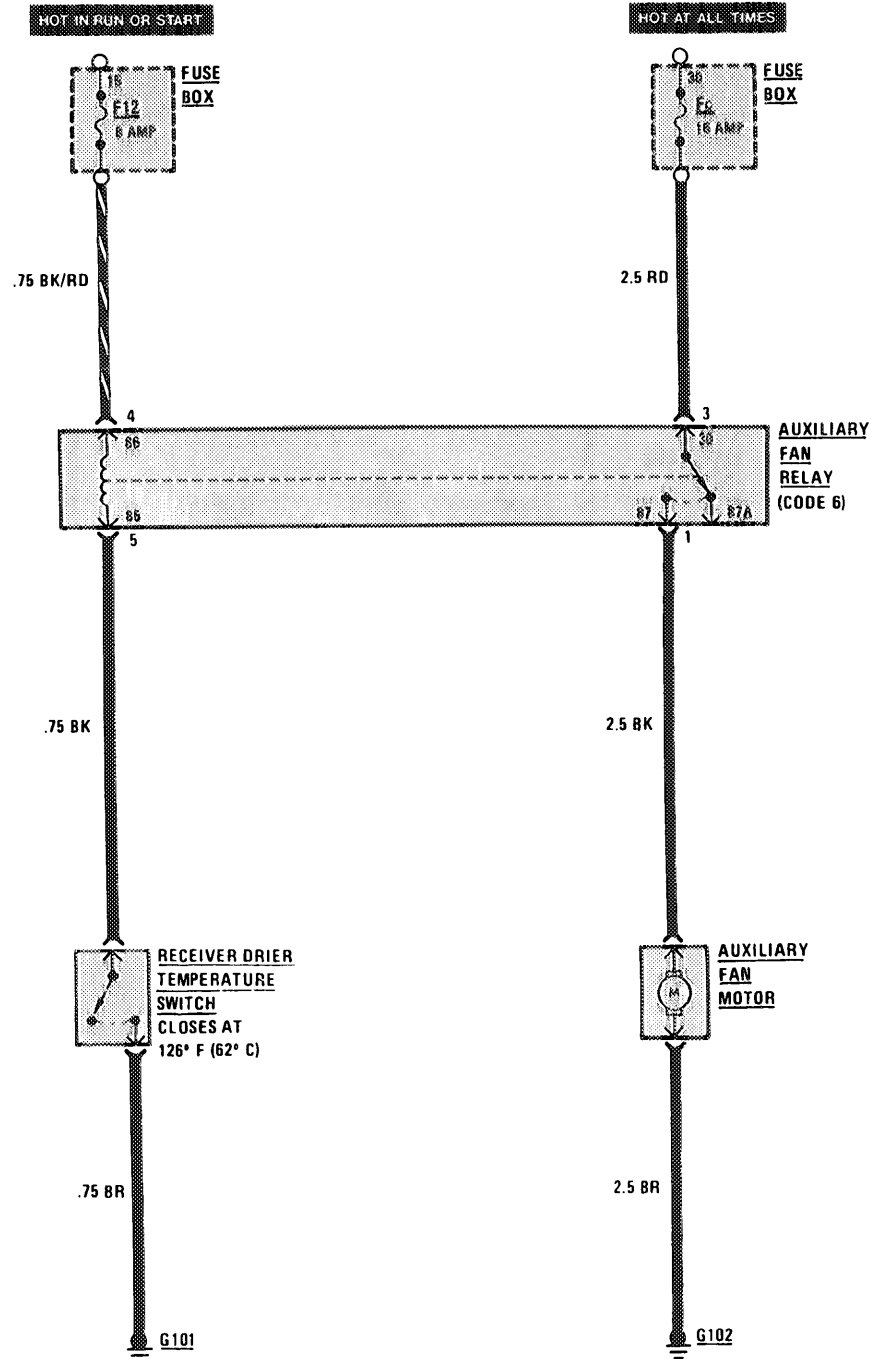






# REAR WIPER/WASHER

(For Component Locations See Page 206)

HOT IN ACCY. RUN OR START


300 TD ONLY

130  
300  
D/CD/TD

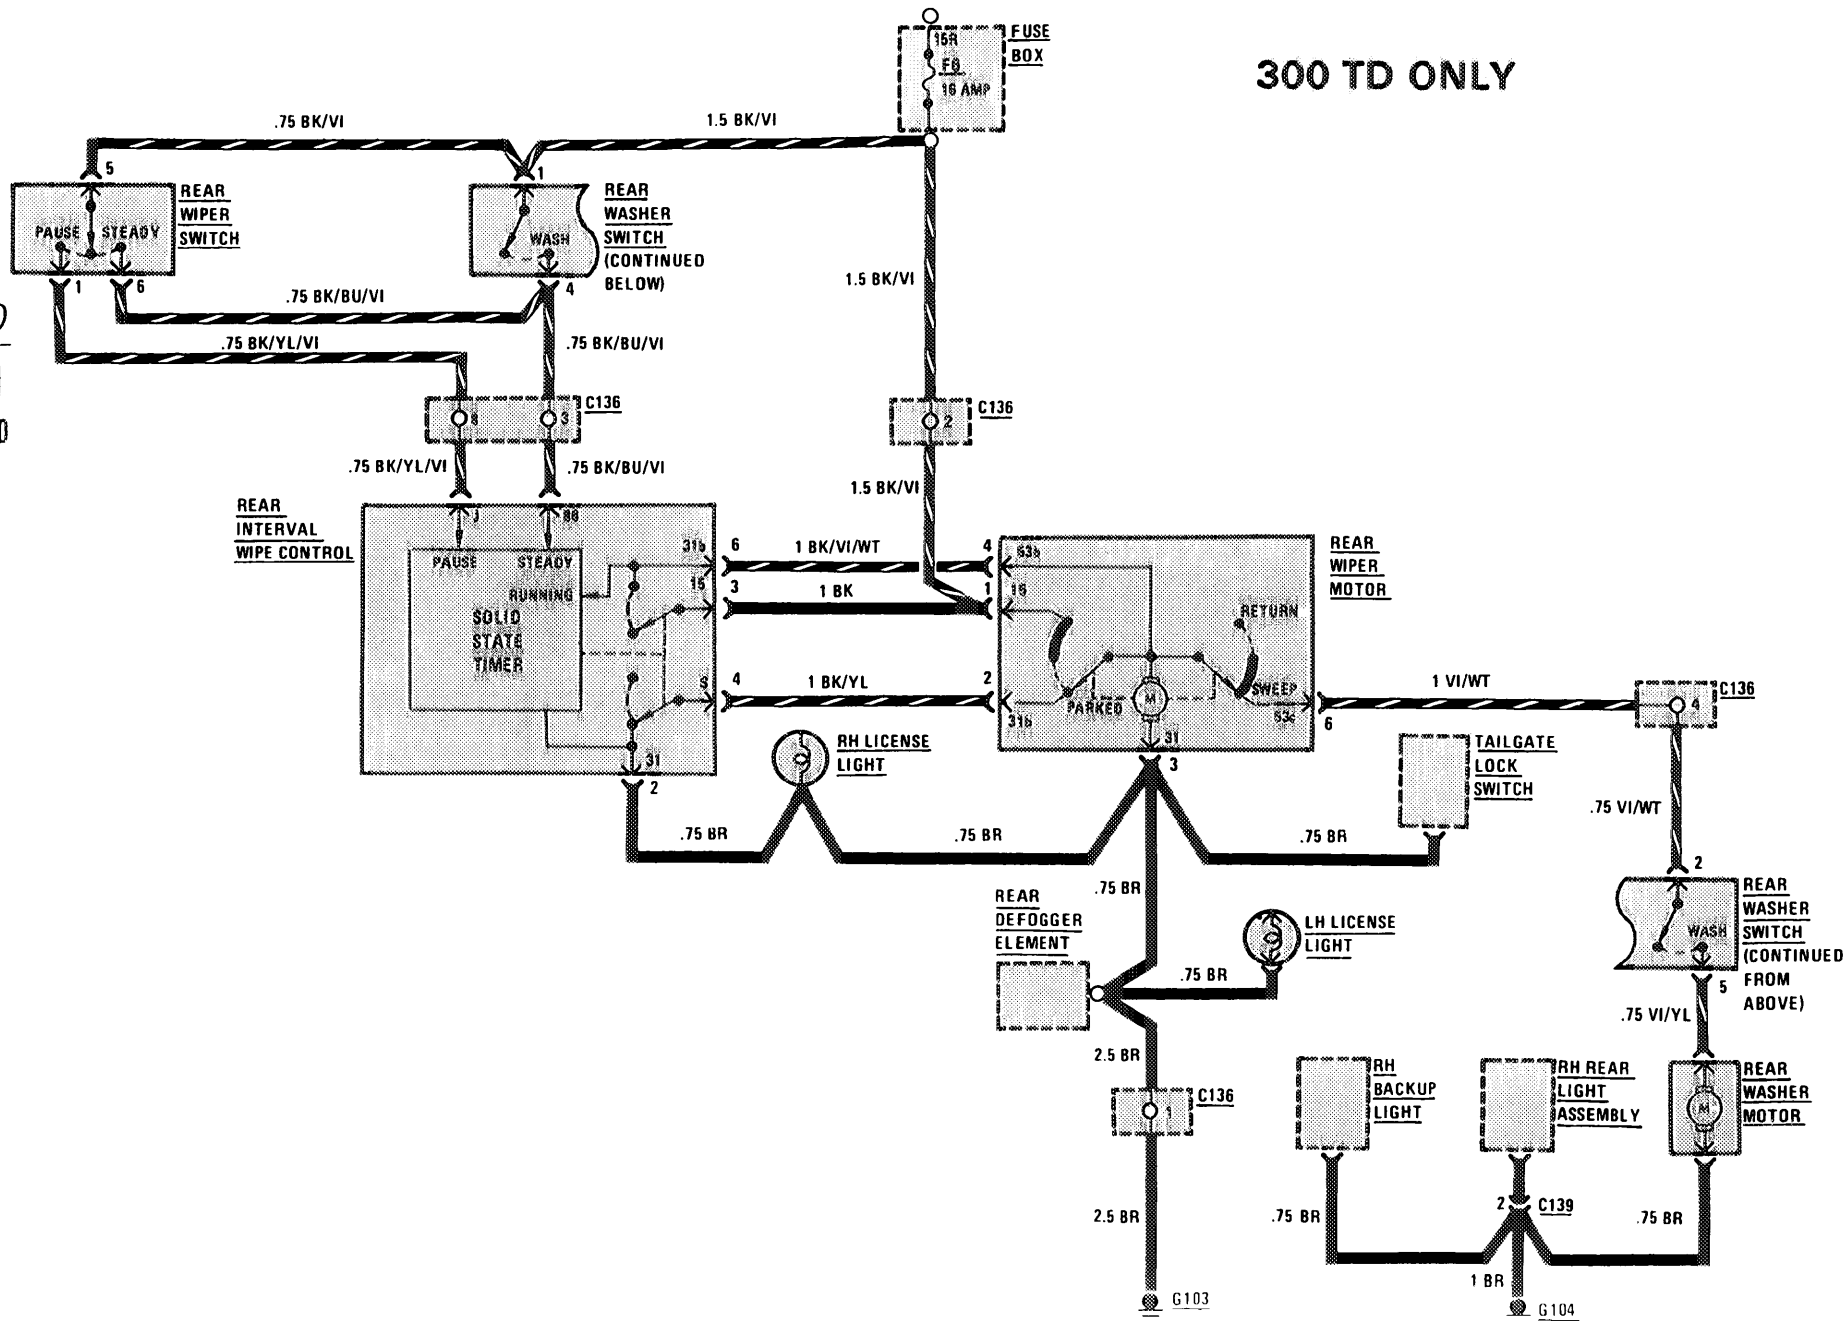


# REAR DEFOGGER

(For Component Locations See Page 205)

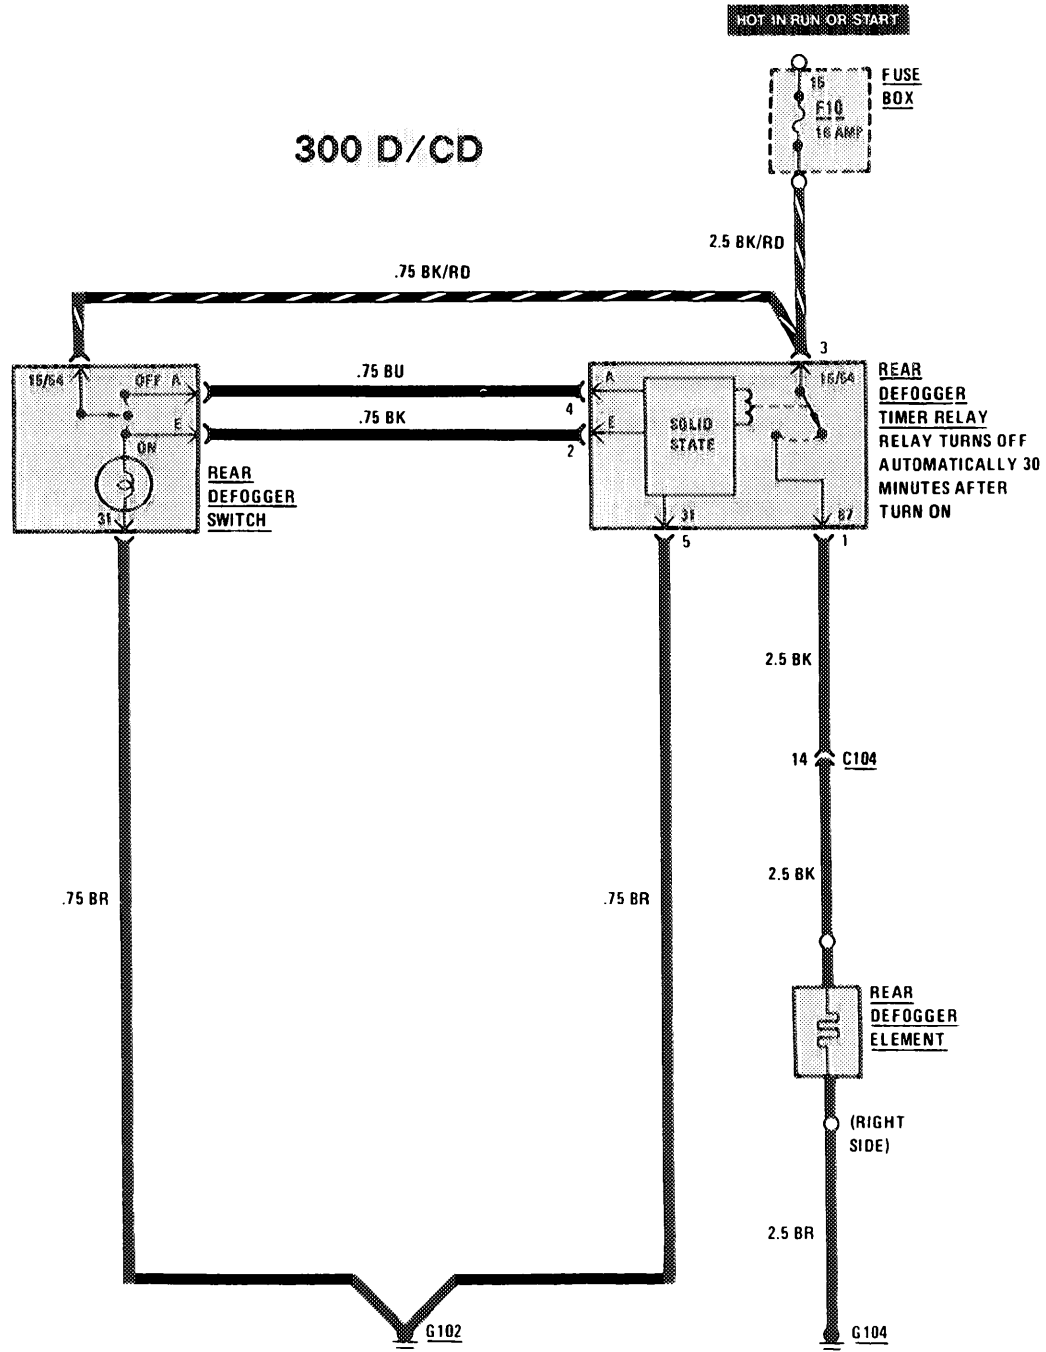

# REAR DEFOGGER


(For Component Locations See Page 205)

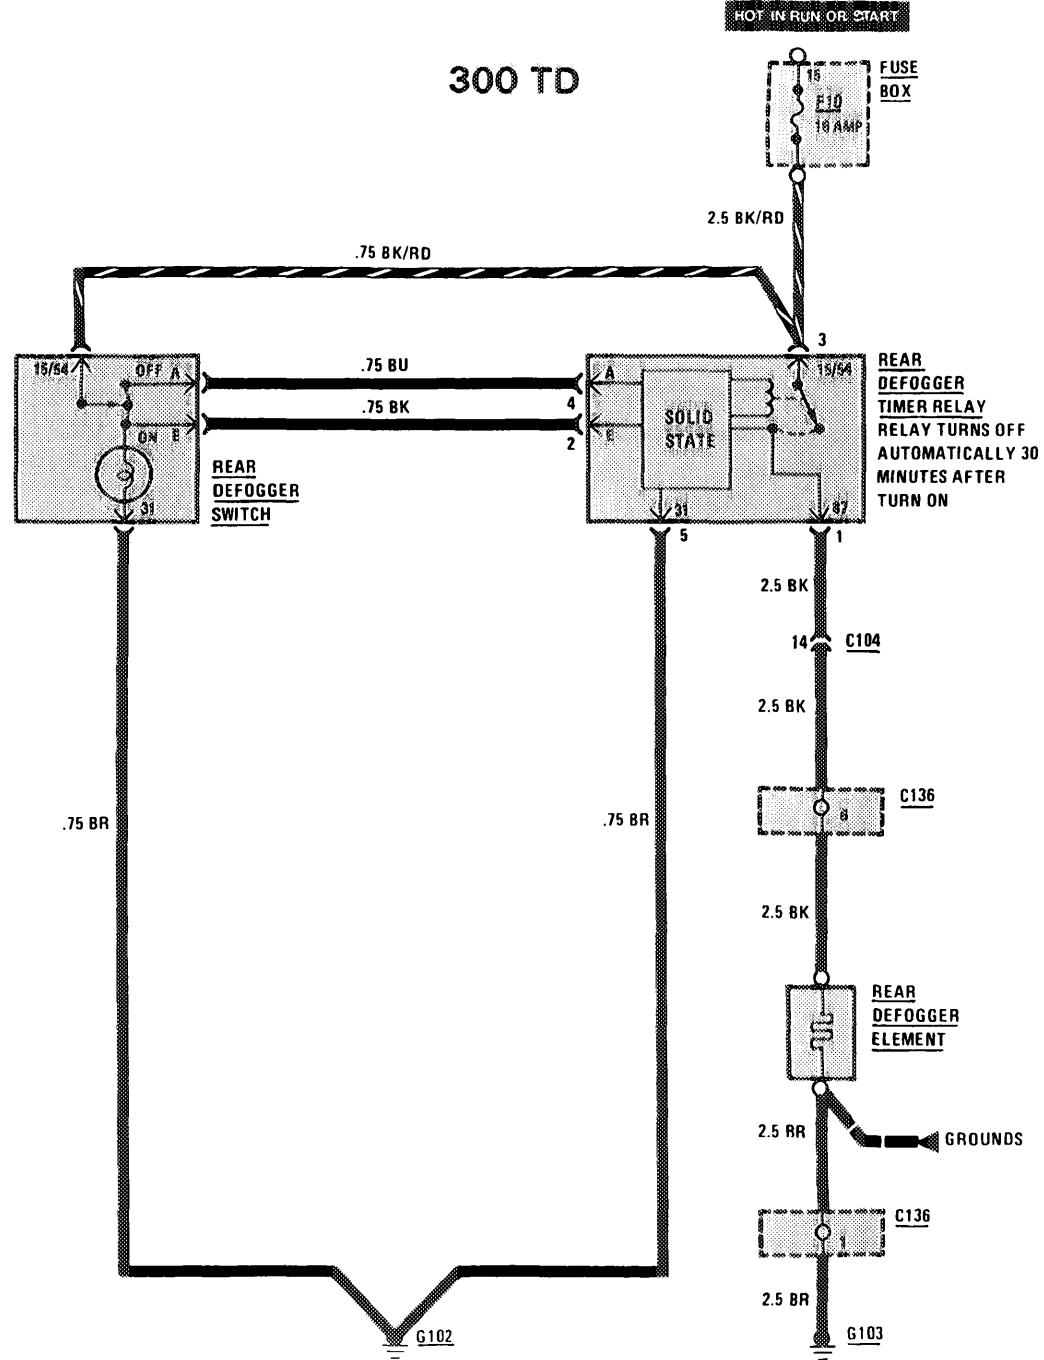

132  
300  
Q/CD/TD

# POWER WINDOWS


(For Component Locations See Page 205)

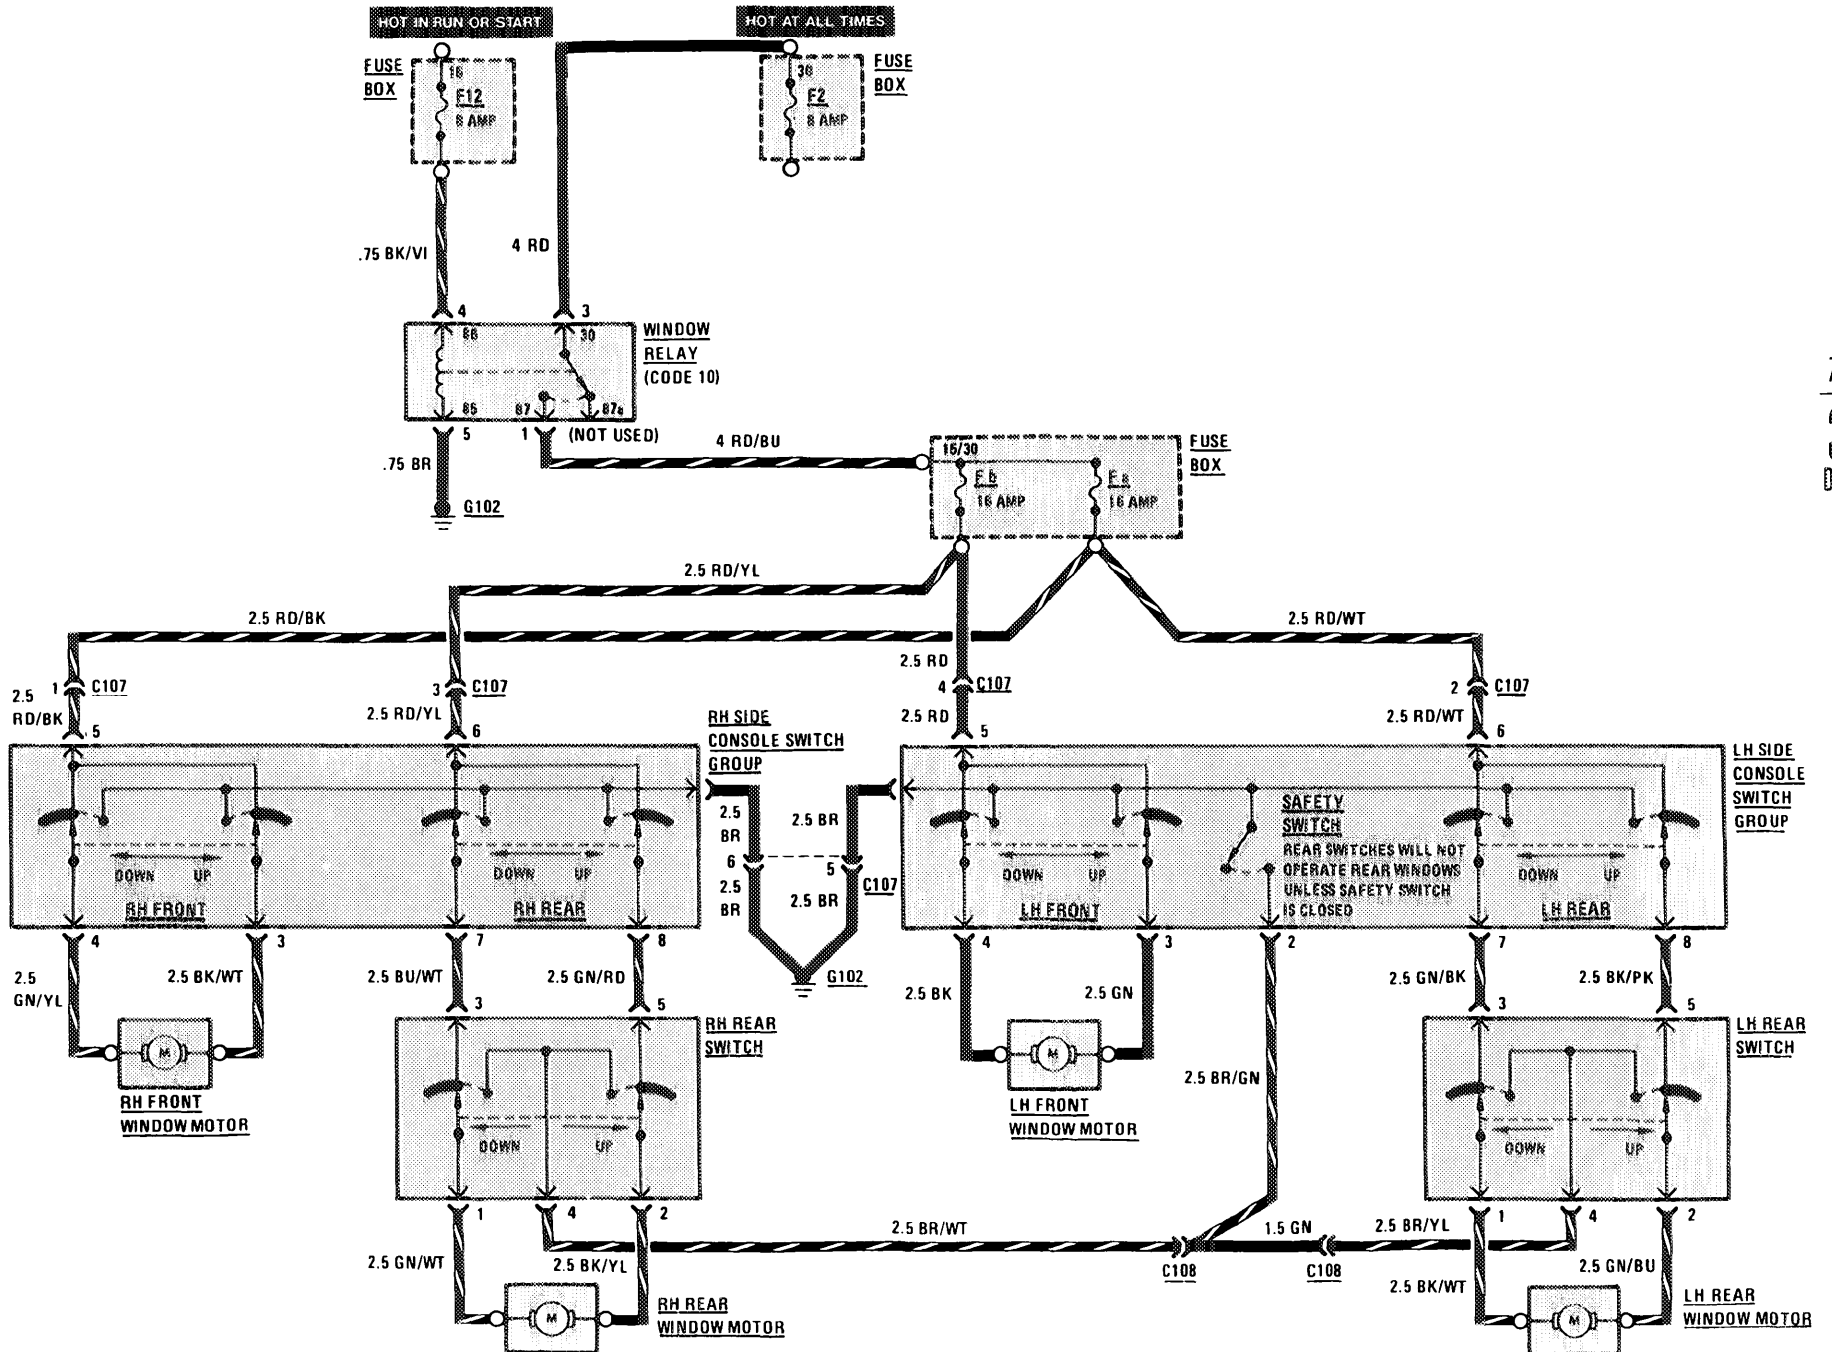

# CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

(For Component Locations See Page 202)


134  
300  
Q/CD/TD

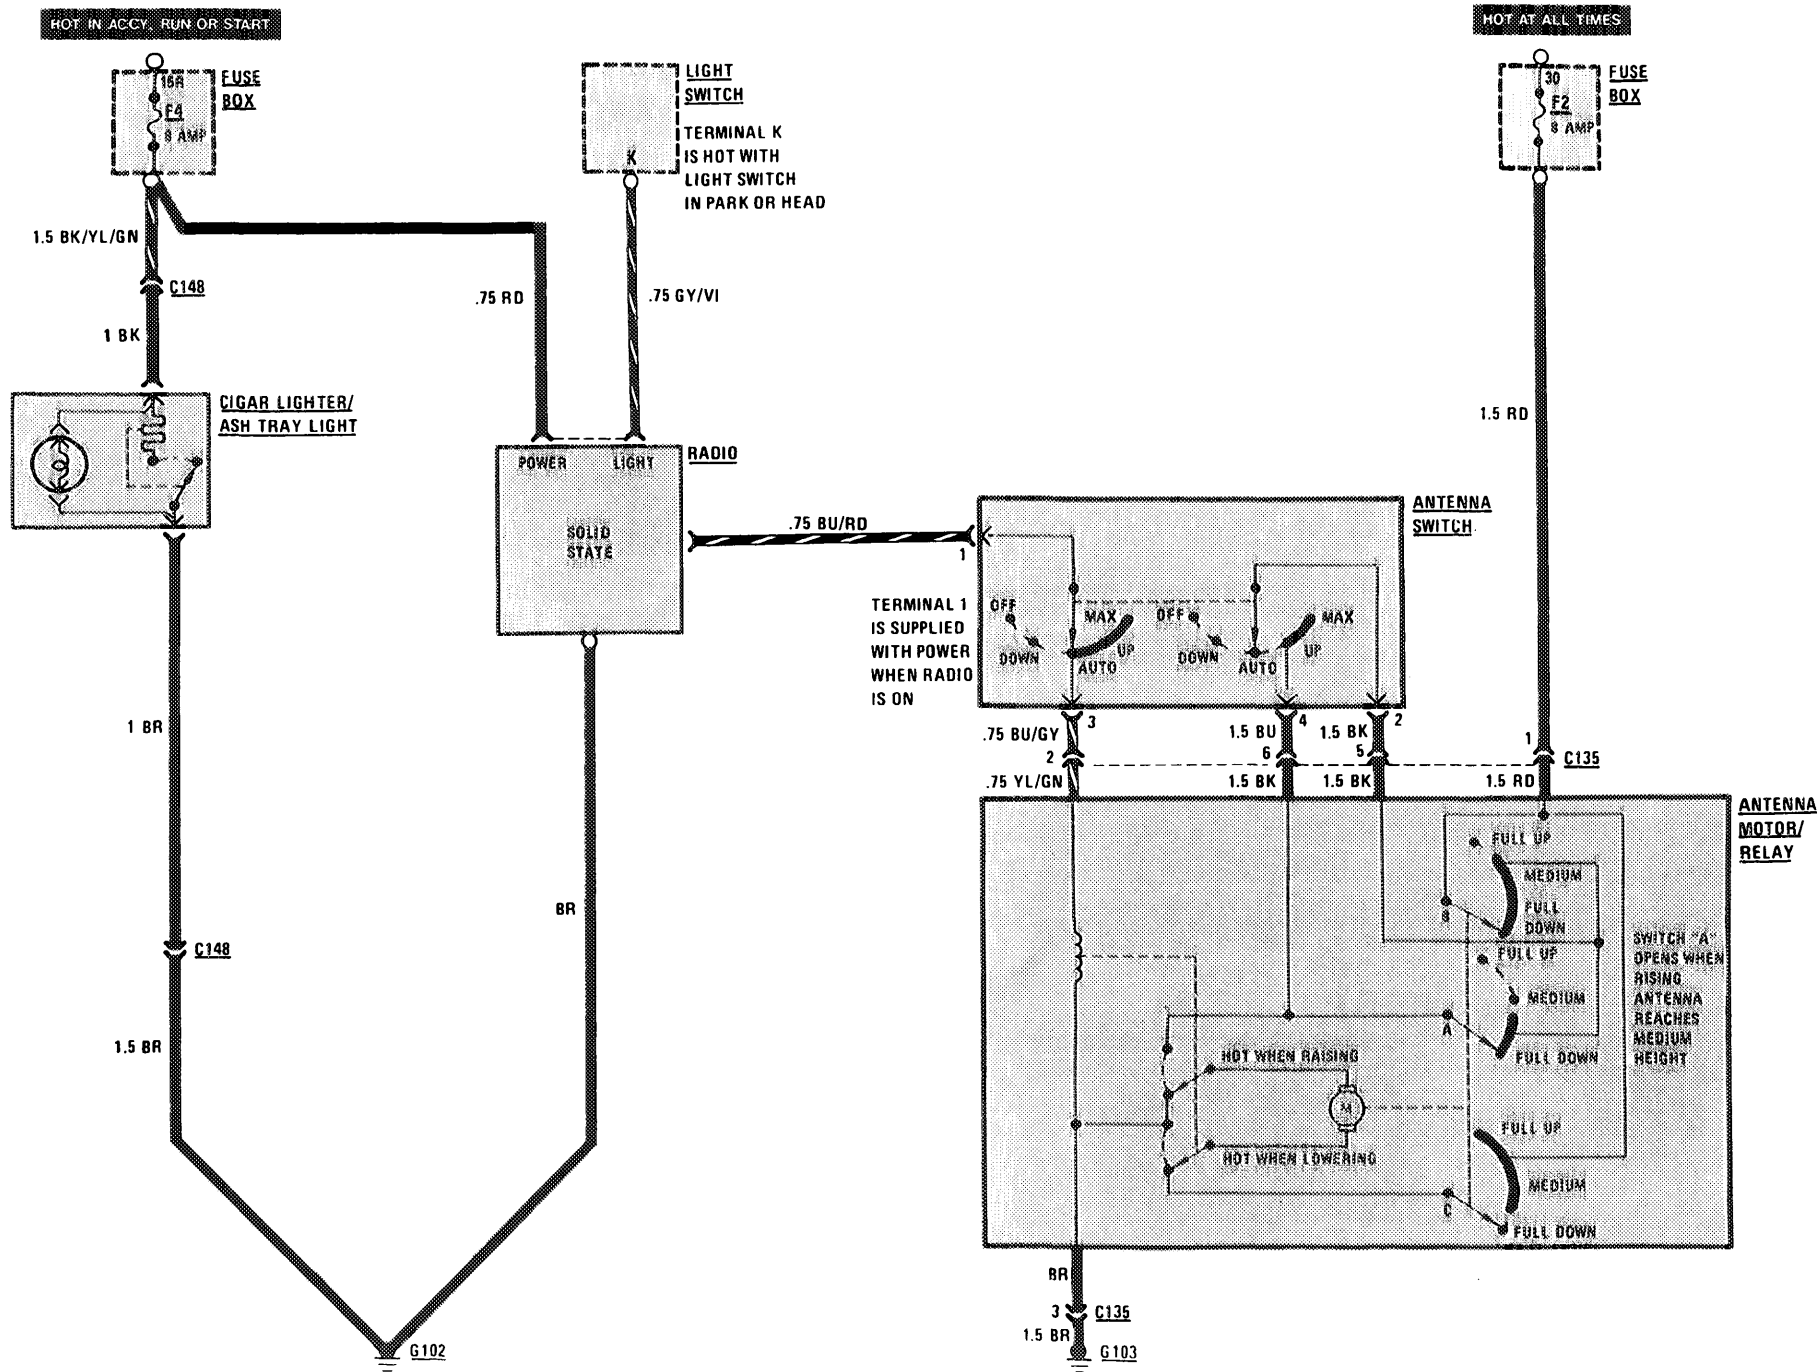



# HEATED SEATS

(For Component Locations See Page 203)

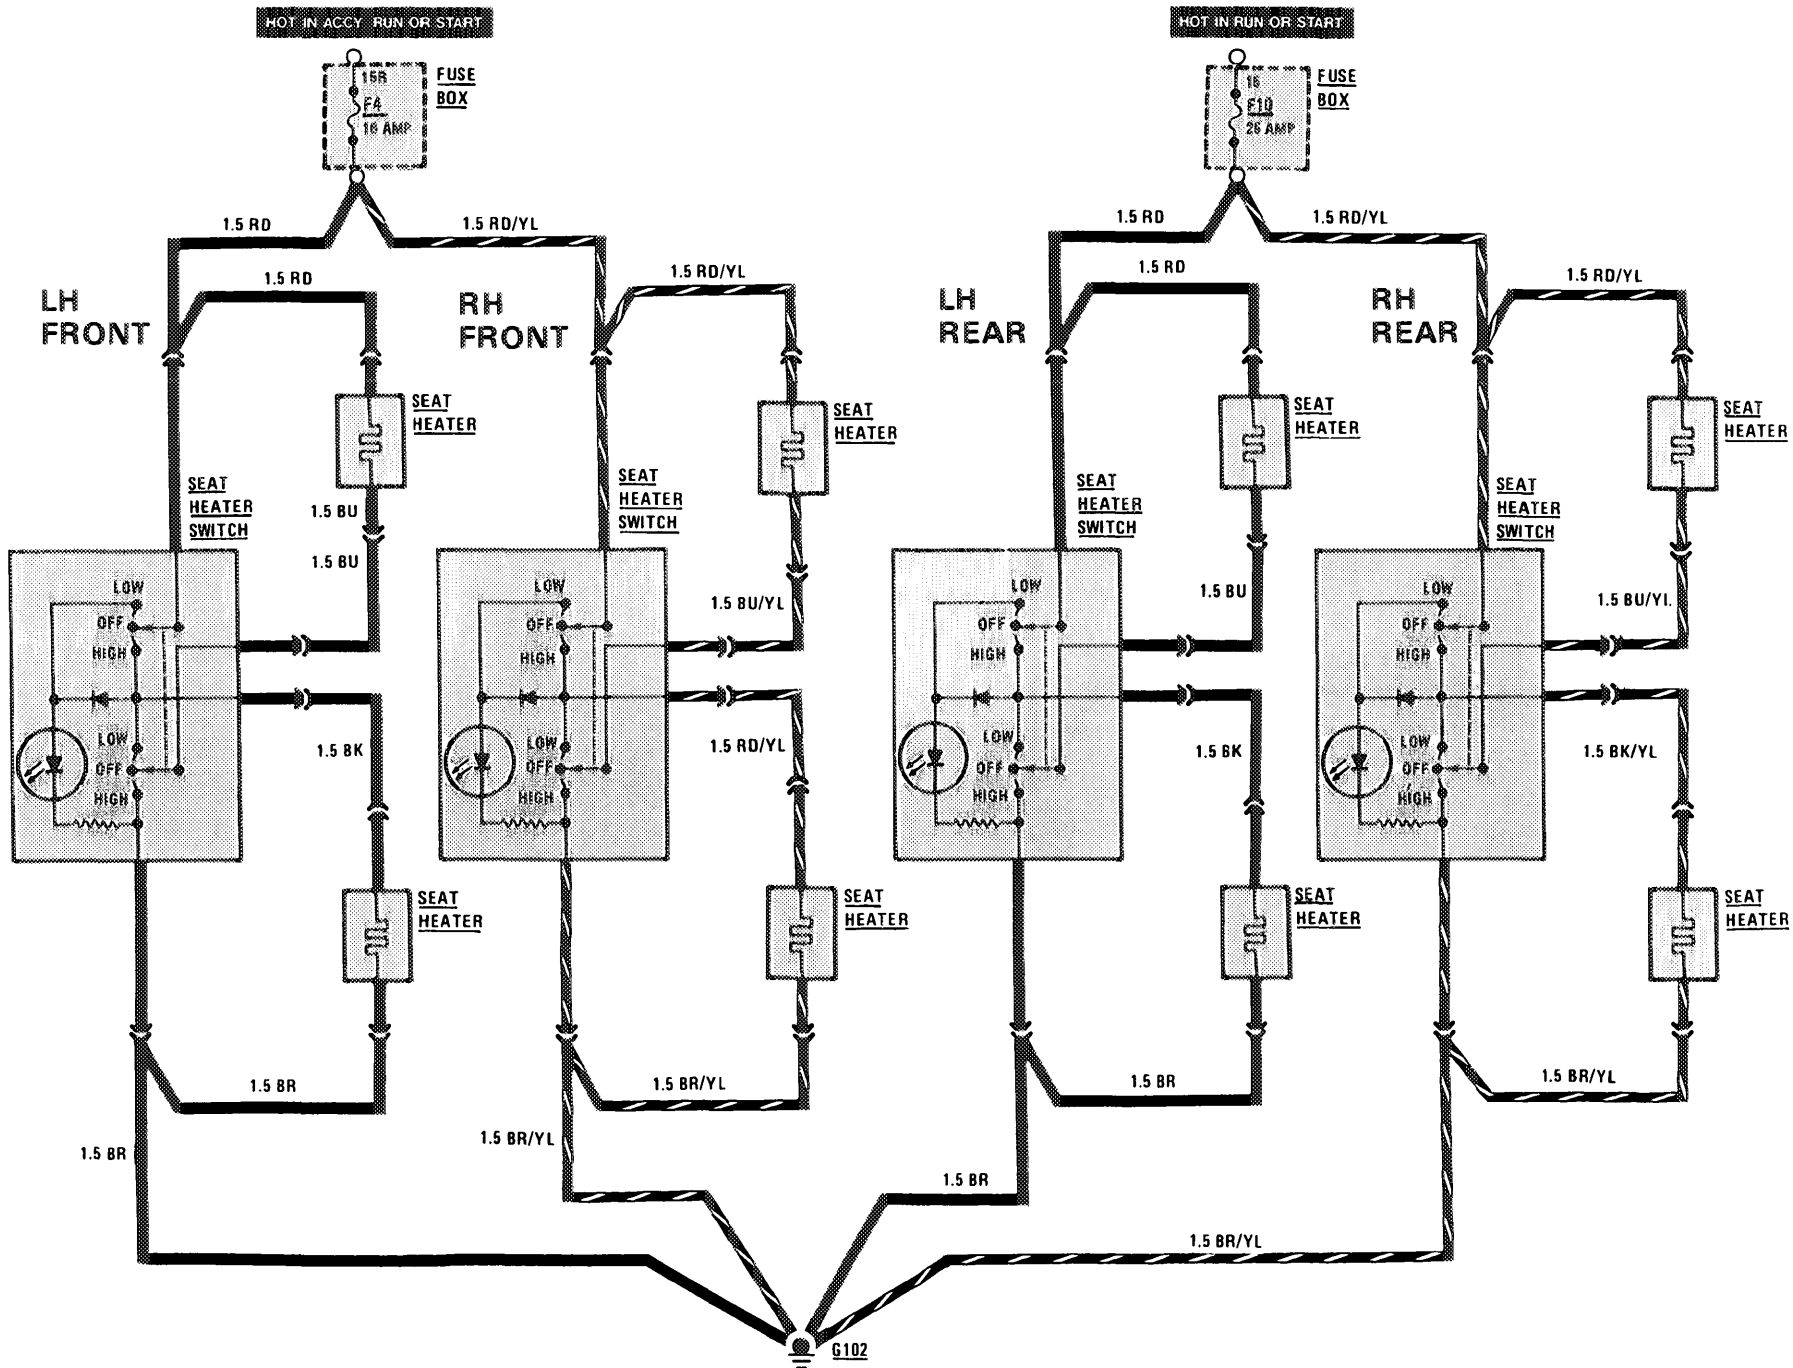


135  
300  
D/CO/TD

# SEAT BACKREST LOCKING SYSTEM

(For Component Locations See Page 206)

300 CD ONLY


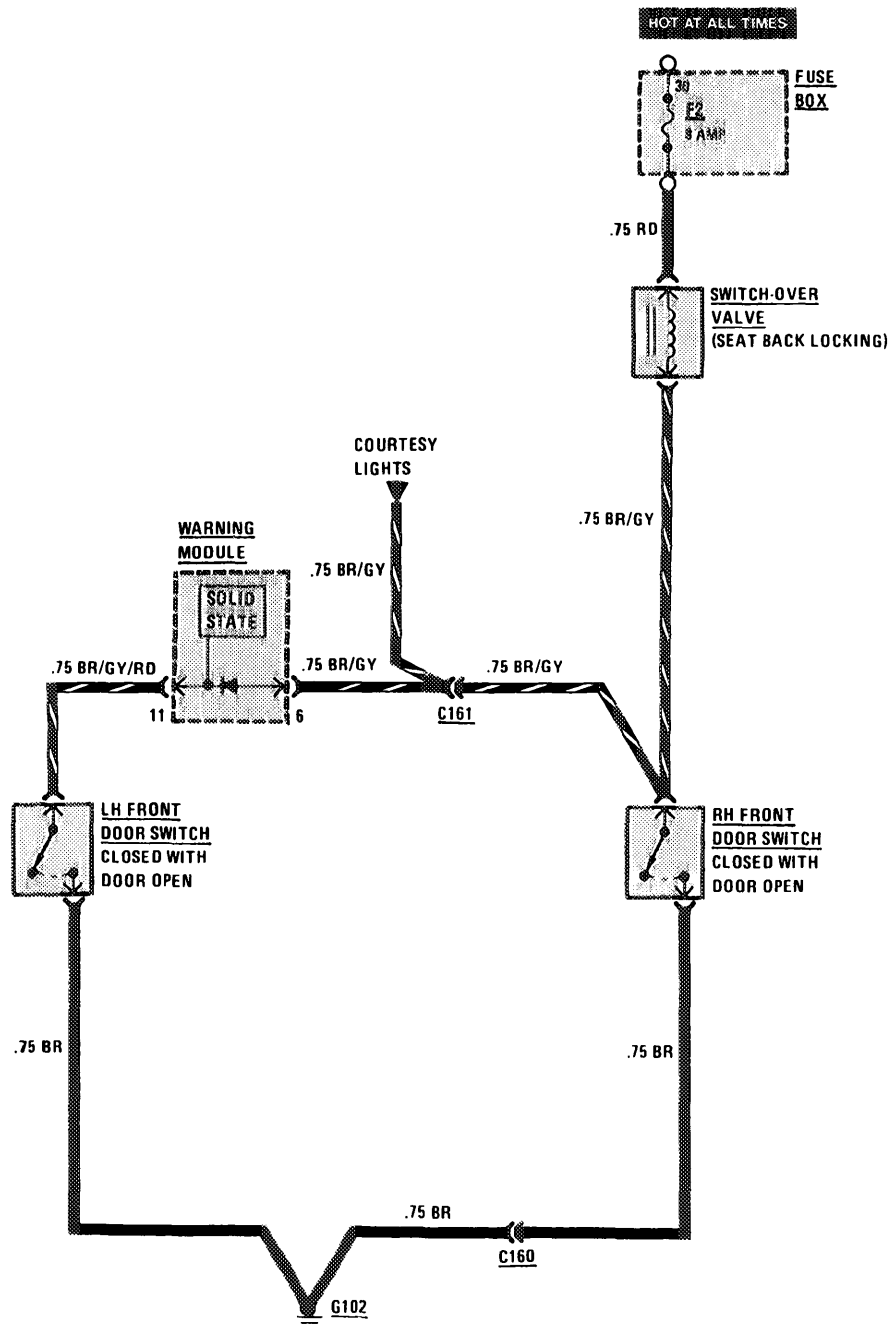


136

300  
D/CD/TD



# HORNS/SLIDING ROOF

(For Component Locations See Page 203)

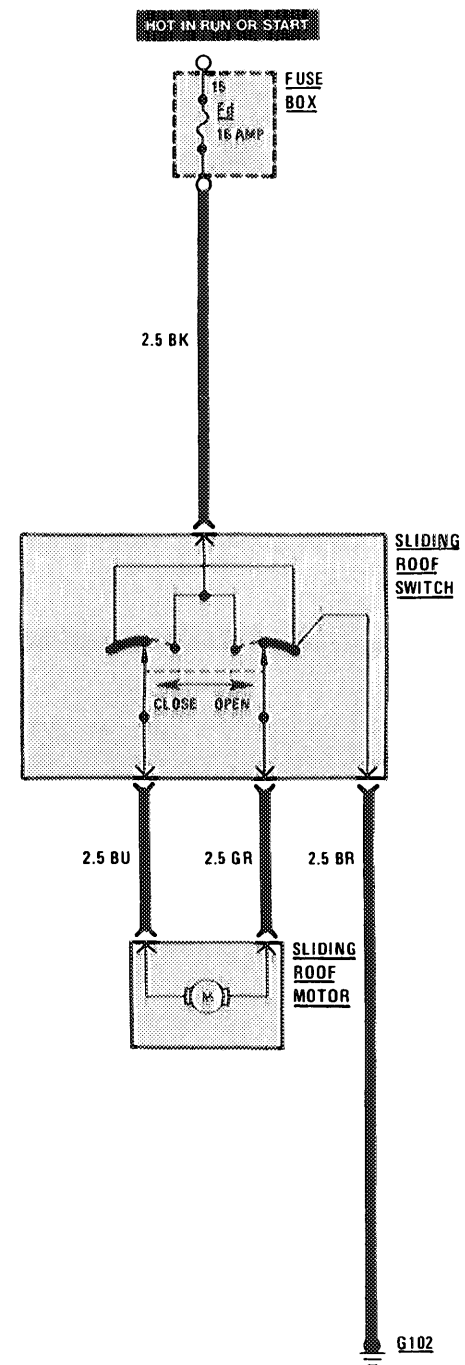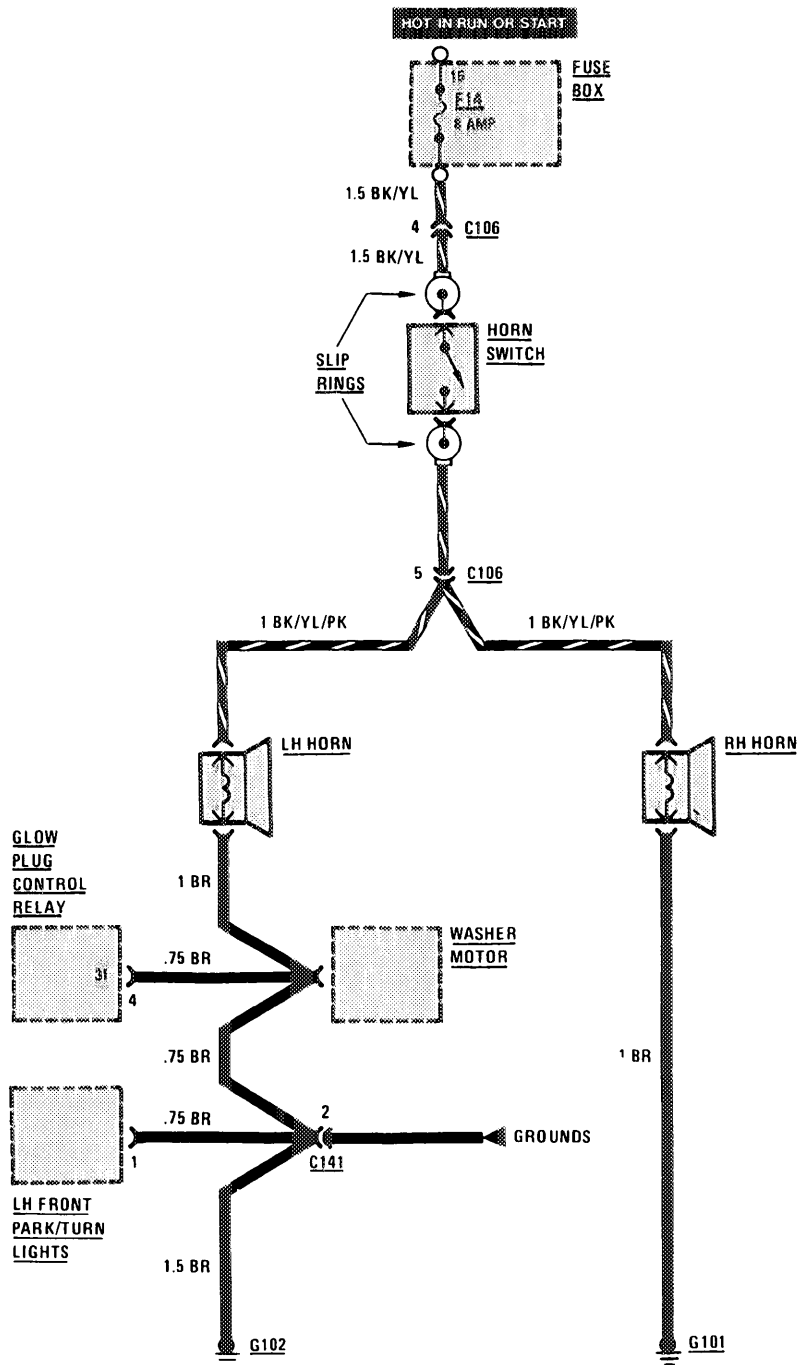


# GROUND DISTRIBUTION


138  
300  
D/CD/TO

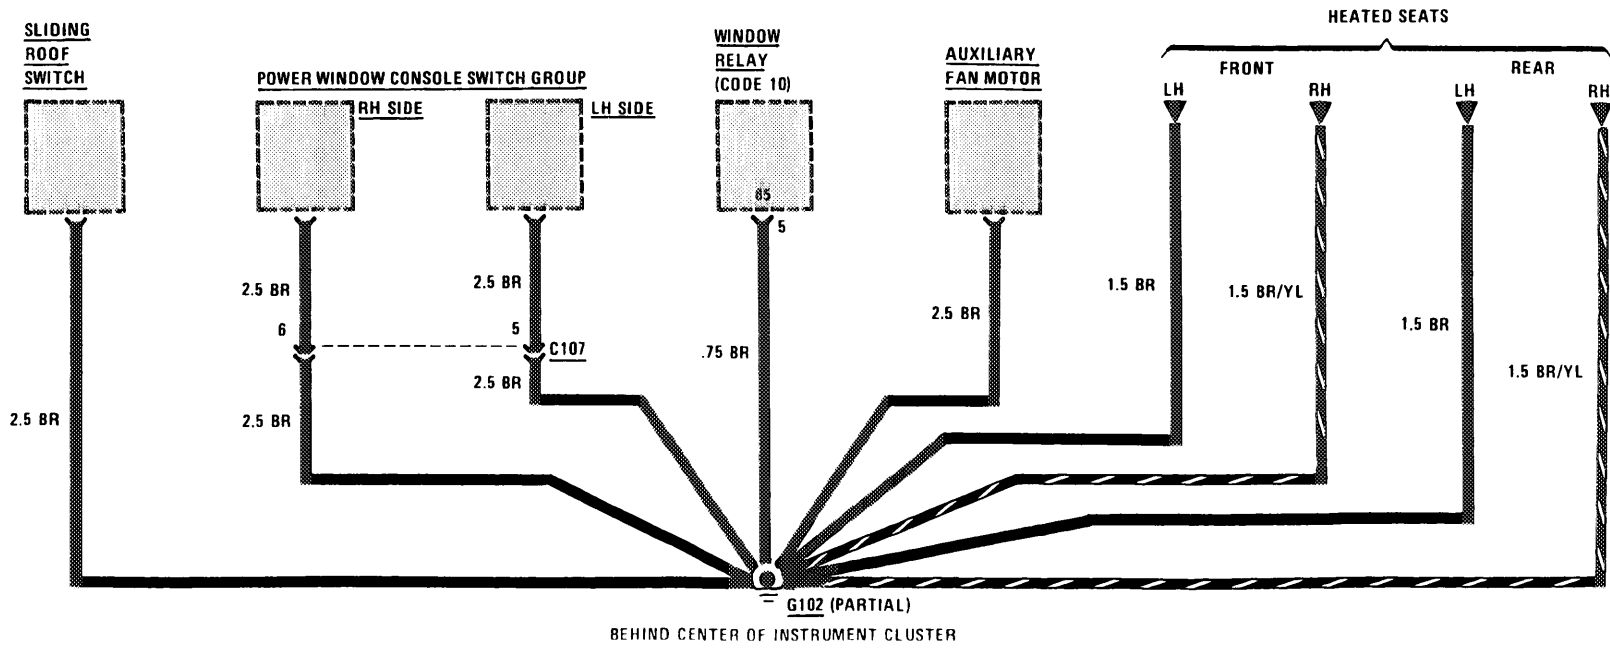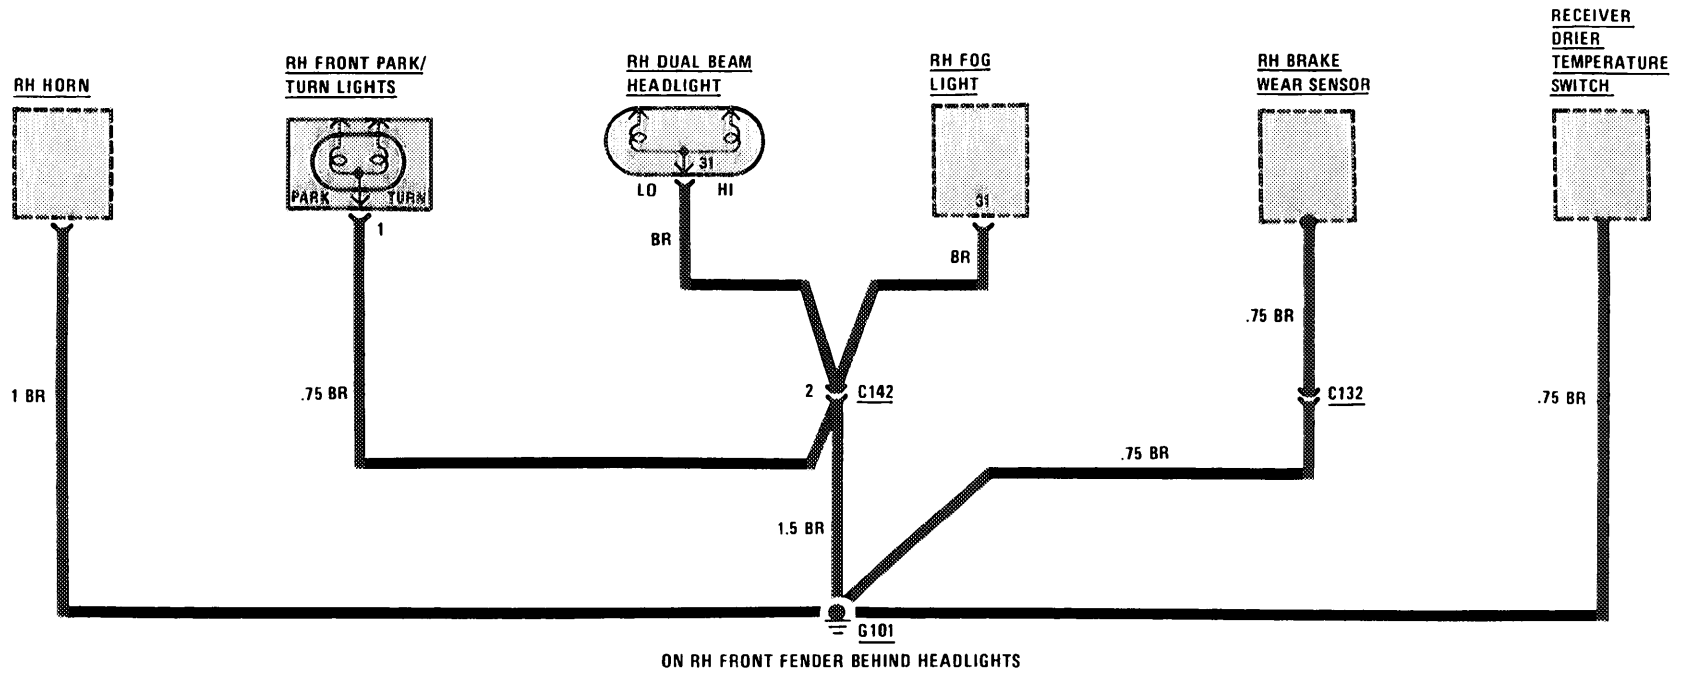

# GROUND DISTRIBUTION

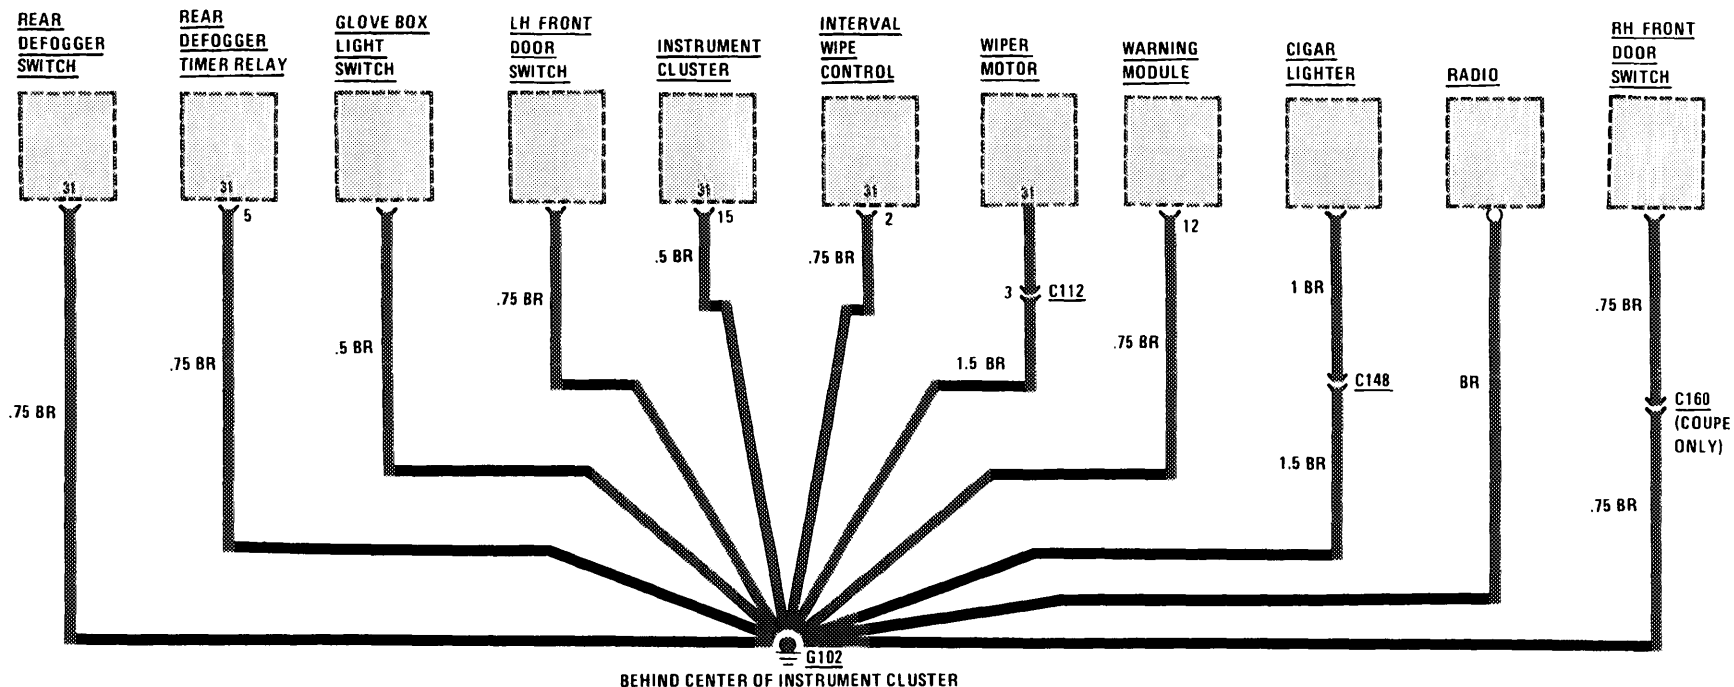



139  
300  
D/CO/TO

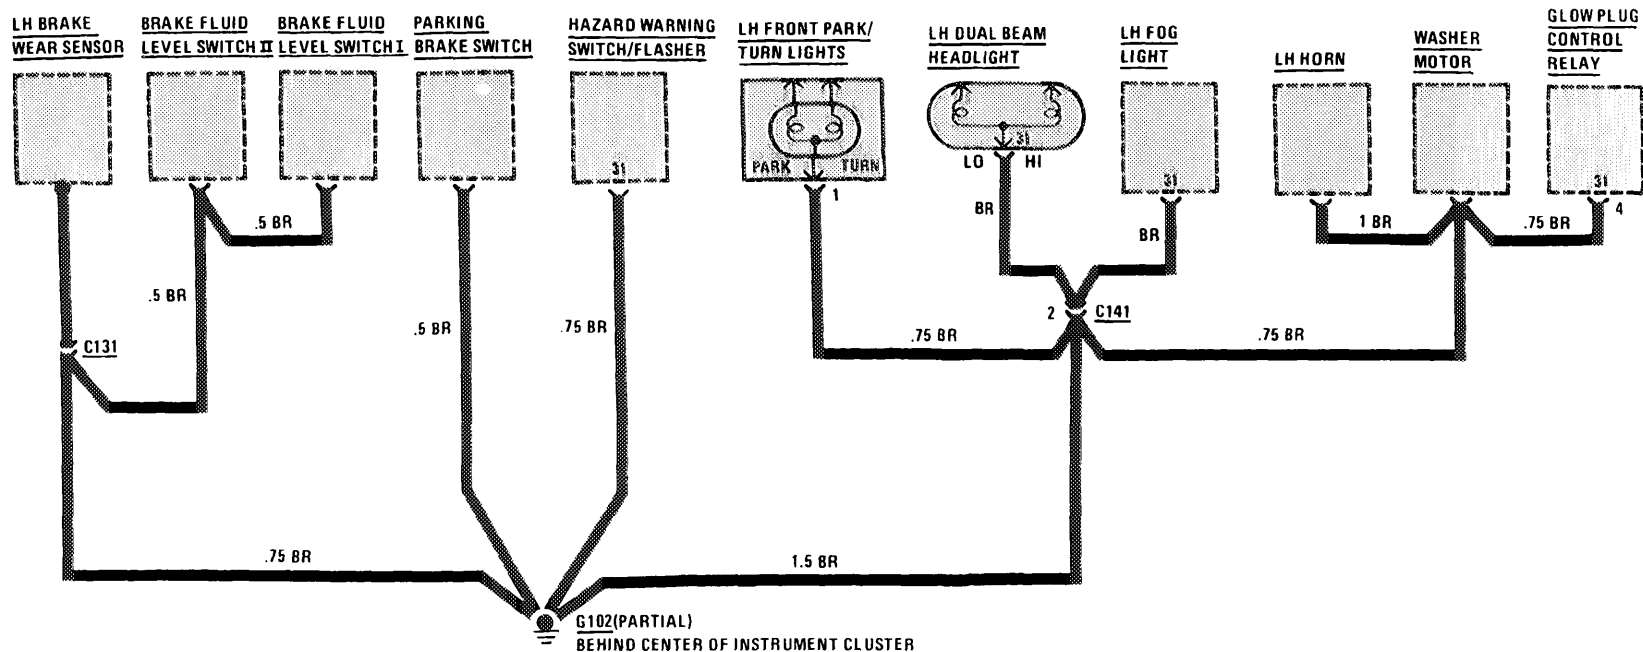

# GROUND DISTRIBUTION


300 TD

140  
300  
D/CD/TD

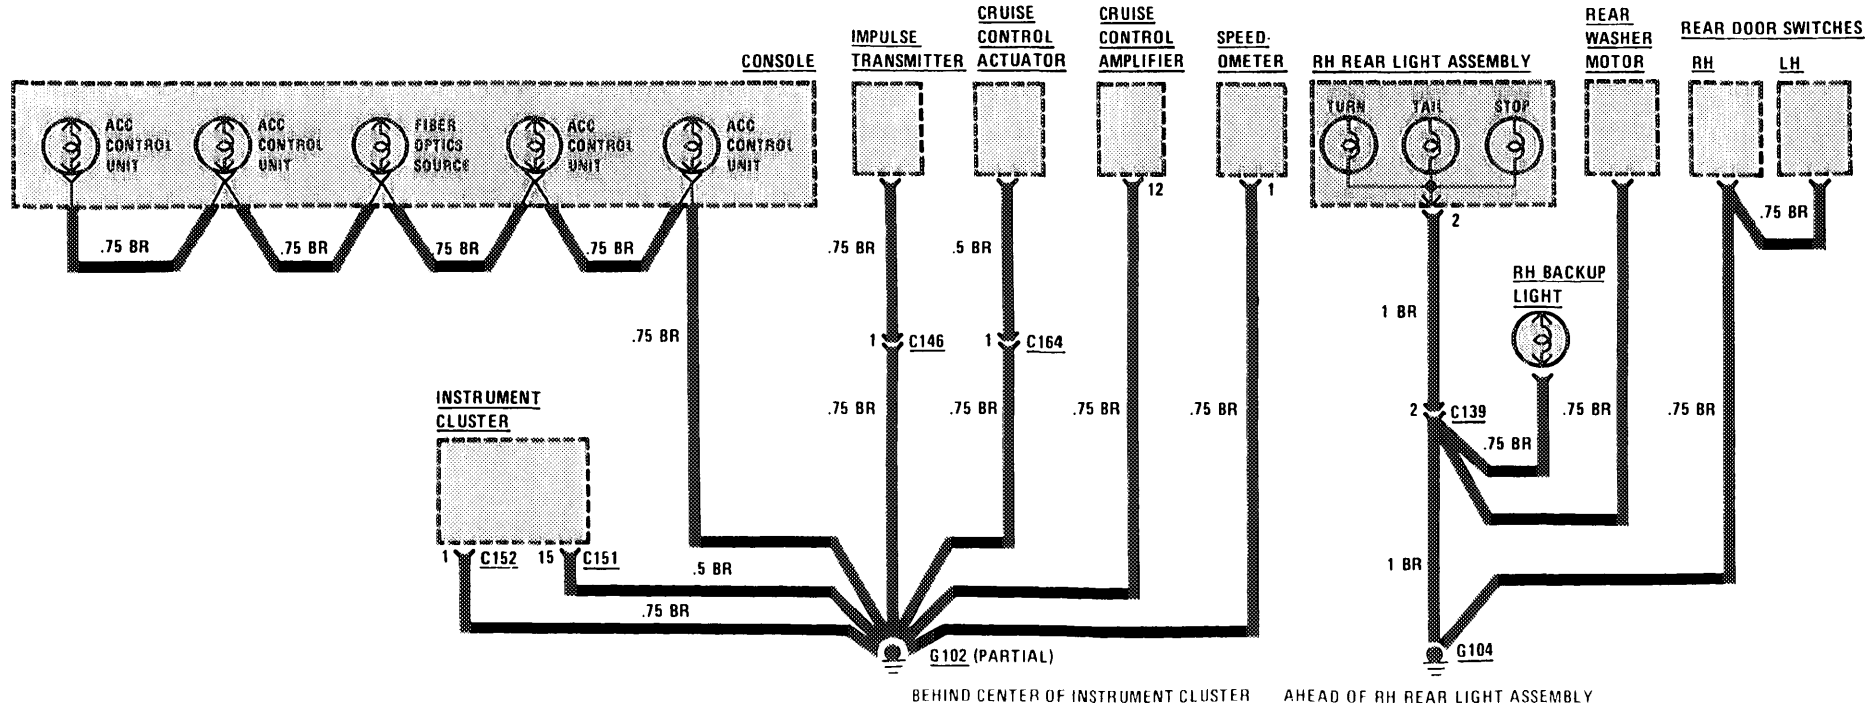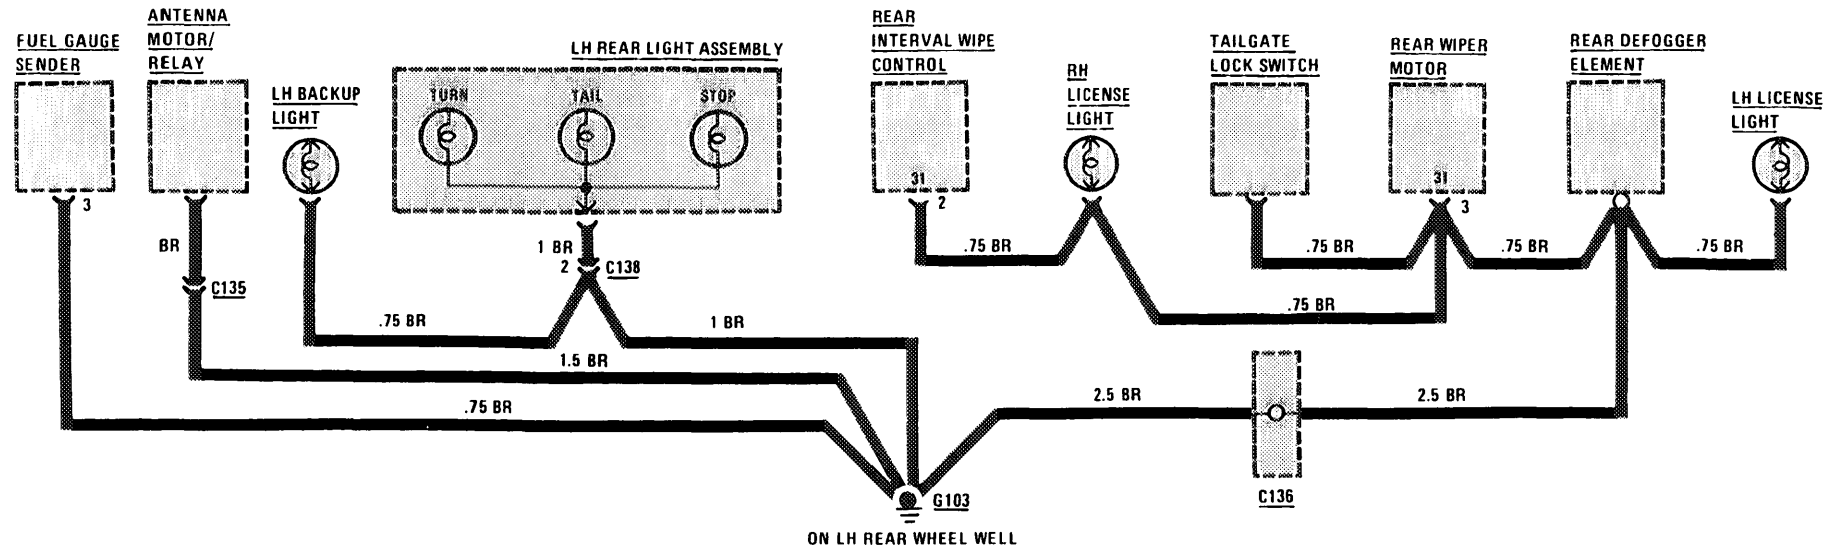

# GROUND DISTRIBUTION

300 D/CD

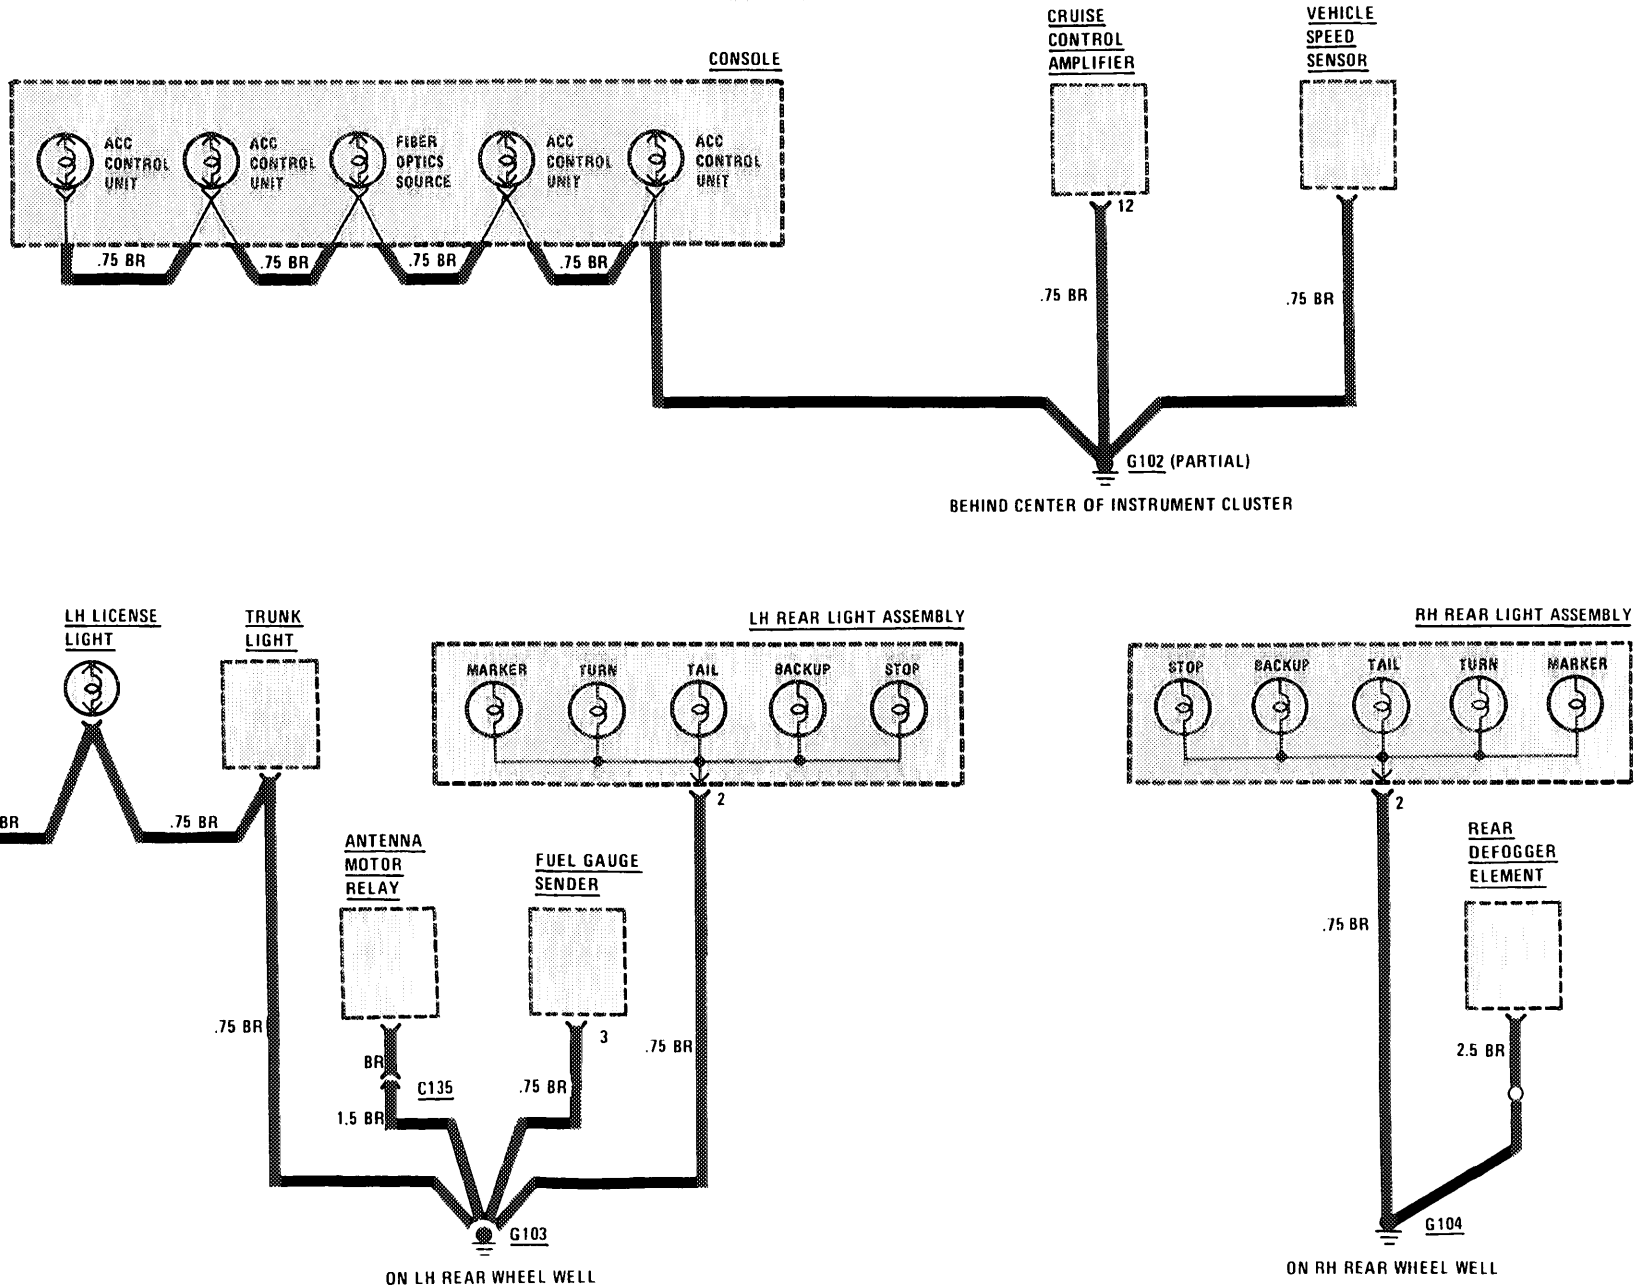

141  
300  
D/CD/TD