


A. Model 116.120 and model 123.193 1st version

**Removal**

---

- 1 Compress spreader clip (arrow) behind accelerator pedal and pull out.

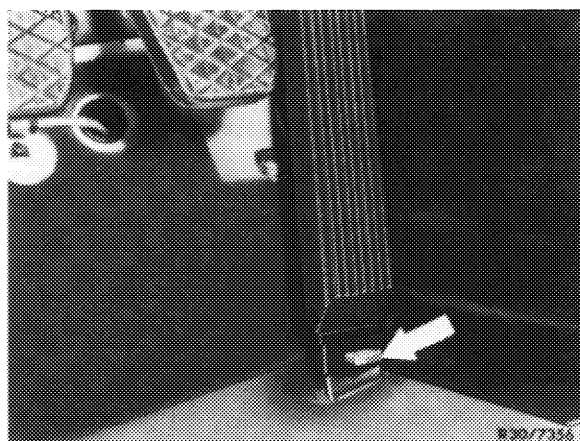

**Installation**

---


- 2 During installation, make sure that spreader clip is reliably engaging.

B. Model 123.193 2nd version and model 126.120

**Removal**


---

- 1 Compress spreader clip (arrow) behind accelerator pedal and pull out.

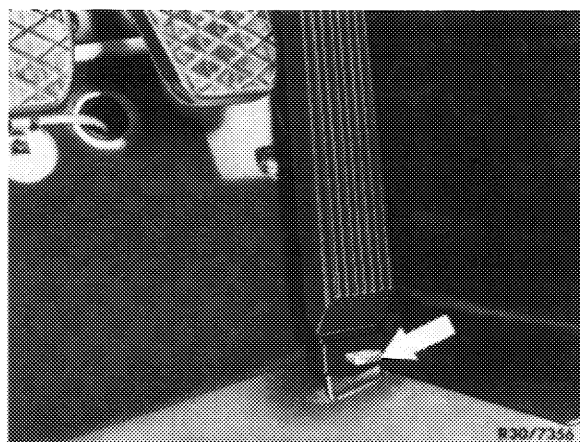

2 Slide accelerator pedal in upward direction and rotate by 180°.

3 Pull off accelerator pedal in downward direction, lug (arrow) on accelerator pedal lever should be in alignment with groove in accelerator pedal.

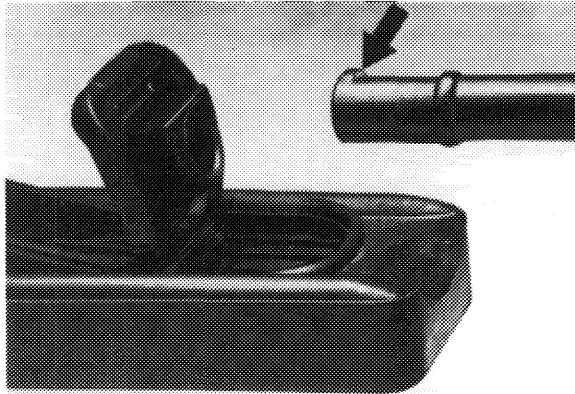

107-17214

### Installation

---

4 For installation proceed vice versa, making sure that spreader clip is reliably engaging.

The connection from accelerator pedal lever to accelerator pedal is maintenance-free and requires no lubrication.