

## 72–250 Removal and installation of door lock

---

### Data

---

Relief play between pull hook on door handle and door lock

---

1 mm

---

### Removal

---


- 1 Remove door lining (72–100).
- 2 Loosen plastic sheeting in range of door lock.
- 3 Disconnect pull linkage on door lock.
- 4 Screw out the four screws for attaching lock.
- 5 Pull clip on door handle and remove door lock in downward direction.

### Installation

---

- 6 Turn pull hook on door handle upwards.
- 7 Install door lock while pushing lever in direction of arrow.

**Note:** Coat latch and striker pin with **SHELL RETINAX G** and the inside of the lock with **CALYPSOL H 729**.

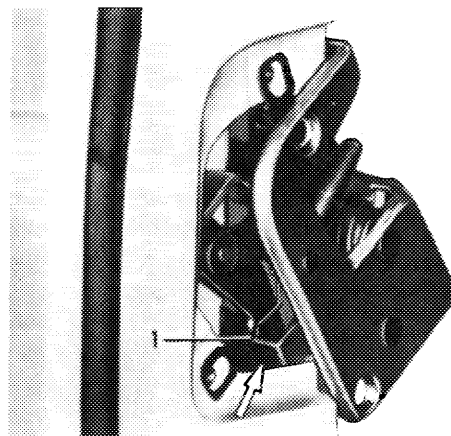

R 72/6341