



Engines 110 117 only California version

**Commercially available tools**

Feeler gauge for spark plug gap



000 589 09 23 00

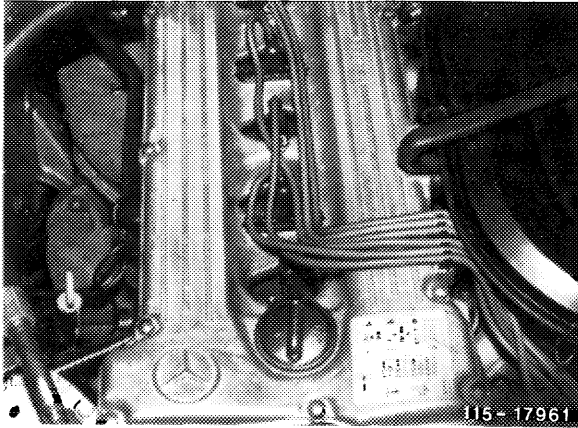

- On engine 110, blow out spark plug cavities in cylinder head prior to removing spark plugs.
- Remove spark plugs and check for deposits on electrodes. If deposits are present, replace spark plugs (according to spark plug table).
- If deposits are not present, regap spark plugs to 0.8 mm.
- Install spark plugs and torque to 25 – 30 Nm (2,5–3,0 kpm).